

Shark[®]

ROTATOR[®]

POWERED LIFT-AWAY[®]

NV755

UV795

Series

INSTRUCTIONS





sharkclean.com





1-800-798-7398

THANK YOU
for purchasing the Shark® Rotator® Powered Lift-Away®

- **TIP:** You can find the model number on the rating label located on the back of your unit.
- **TIP:** You can locate the date code on one of the prongs of the power cord plug.

REGISTER YOUR PURCHASE

-  registryyourshark.com
-  1-800-798-7398

RECORD THIS INFORMATION

Model Number: _____

Date Code: _____

Date of Purchase (Keep receipt): _____

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V., 60Hz

Watts: 1150W

Amps: 9.5A

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This **instruction manual** is designed to help you get a complete understanding of your new Shark Rotator Powered Lift-Away.

If you should have a question, please call the Customer Service line at 1-800-798-7398.

CONTENTS

Important Safety Instructions..... 3

Getting to Know Your Shark® Rotator® Powered Lift-Away®..... 5

Assembling Your Vacuum 7

Using Your Vacuum in Upright Mode 9
What Does the Brushroll Indicator Light Mean? 9

Using Your Vacuum in Above-Floor Mode11

Changing Your Floor Nozzles 13
Motorized Floor Nozzle.....13
Dust-Away® Hard Floor Attachment13

Using Your Vacuum in Lift-Away® Mode..... 15
Lift-Away Cleaning16

Using Your Caddy 17

Compatible Accessories..... 19

Maintenance 21
Emptying the Dust Cup.....21
Cleaning the Filters..... 22
Checking for Blockages & Maintaining Brushroll..... 23

Troubleshooting Guide..... 25

Warranty 26

IMPORTANT SAFETY INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of injury, fire, electric shock, and property damage resulting from improper use of the appliance, carefully observe the following instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.

THE MOTORIZED FLOOR NOZZLE, WAND, AND HANDLE CONTAIN ELECTRICAL CONNECTIONS:

- These are not serviceable parts.
- DO NOT use to vacuum any liquids.
- DO NOT immerse in water.
- If handle/wand is damaged, discontinue use.

- 1 Inspect power cord or plug for any damage before use. DO NOT use vacuum cleaner with a damaged cord or plug. Turn off all controls before plugging or unplugging the vacuum cleaner. Store your vacuum cleaner with the power cord secured around the two cord hooks.
- 2 DO NOT use outdoors or on wet surfaces. Use only on dry surfaces.
- 3 Unplug from electrical outlet when not in use and before servicing.
- 4 If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or immersed in water, return it to SharkNinja Operating LLC for examination, repair, or adjustment.
- 5 The hose contains electrical wires. DO NOT use when damaged, cut, or punctured.
- 6 DO NOT pull or carry vacuum cleaner by the cord or use the cord as a handle.
- 7 DO NOT unplug by pulling on cord. Grasp the plug, not the cord.
- 8 DO NOT handle plug or vacuum cleaner with wet hands.

- 9 DO NOT run the vacuum cleaner over the power cord, close a door on the cord, or pull cord around sharp corners.
- 10 The use of an extension cord is NOT recommended.
- 11 DO NOT leave vacuum cleaner unattended when plugged in.
- 12 Keep cord away from heated surfaces.
- 13 Always turn off the vacuum cleaner before connecting or disconnecting motorized nozzle.

GENERAL USE

- 14 Use only as described in this manual.
- 15 Keep your work area well lit.
- 16 Keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibers.
- 17 DO NOT place vacuum cleaner on unstable surfaces such as chairs or tables.
- 18 DO NOT put any objects into openings. DO NOT use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- 19 DO NOT allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used near children.

- 20 DO NOT use without dust cup and/or filters in place.

DUST CUP/FILTERS/ACCESSORIES

Before turning on the vacuum:

- 21 Make sure that all filters are thoroughly dry after routine cleaning.

SAVE THESE INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE

- 22 Make sure that dust cup and all filters are in place after routine maintenance.
- 23 Make sure accessories are free of blockages.
- 24 Only use Shark-brand filters and accessories. Using other brands will void warranty.

HOSE ATTACHMENTS

- 25 DO NOT use if airflow is restricted; if the air paths or the motorized floor nozzle become blocked, turn the vacuum cleaner off and unplug from electrical outlet. Remove all obstructions before you turn on the unit again.
- 26 Keep the end of the hose and accessory openings away from face and body.
- 27 Keep cleaning tools and hose suction openings away from hair, face, fingers, uncovered feet, or loose clothing.
- 28 Only use manufacturer's recommended attachments.

GENERAL CLEANING

- 29 DO NOT vacuum up large objects.
- 30 DO NOT vacuum up hard or sharp objects that could damage the vacuum cleaner such as glass, nails, screws, or coins.
- 31 DO NOT vacuum up drywall dust, fireplace ash, or embers. DO NOT use as an attachment to power tools for dust collection.
- 32 DO NOT vacuum up smoking or burning

objects such as hot coals, cigarette butts, or matches.

- 33 DO NOT vacuum up flammable or combustible materials (e.g., lighter fluid, gasoline, or kerosene) or use vacuum in areas where they may be present.
- 34 DO NOT vacuum up toxic solutions (e.g., chlorine bleach, ammonia, or drain cleaner).
- 35 DO NOT use in an enclosed space where vapors are present from paint, paint thinner, moth-proofing substances, flammable dust, or other explosive or toxic materials.
- 36 DO NOT vacuum up any liquids.
- 37 DO NOT immerse vacuum cleaner in water or other liquids.
- 38 Use extra care when cleaning on stairs.

POLARIZED PLUG

To reduce the risk of electric shock, this vacuum cleaner has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT force into outlet or try to modify to fit.


GETTING TO KNOW YOUR SHARK® ROTATOR® POWERED LIFT-AWAY®

WELCOME!

Congratulations on your purchase. Use this instruction manual to learn about your new vacuum's great features. From assembly to use to maintenance, you will find it all in here.


MAIN UNIT

- A** Power Button
- B** Hose
- C** Hose Clip
- D** Surface Selector
- E** Handle Release Button
- F** Upper Cord Hook
- G** Lift-Away Button
- H** Wand Release Button
- I** Lift-Away Pod
- J** Wand
- K** Lower Cord Hook
- L** Motorized Floor Nozzle
- M** Brushroll Indicator Light
- N** Headlights

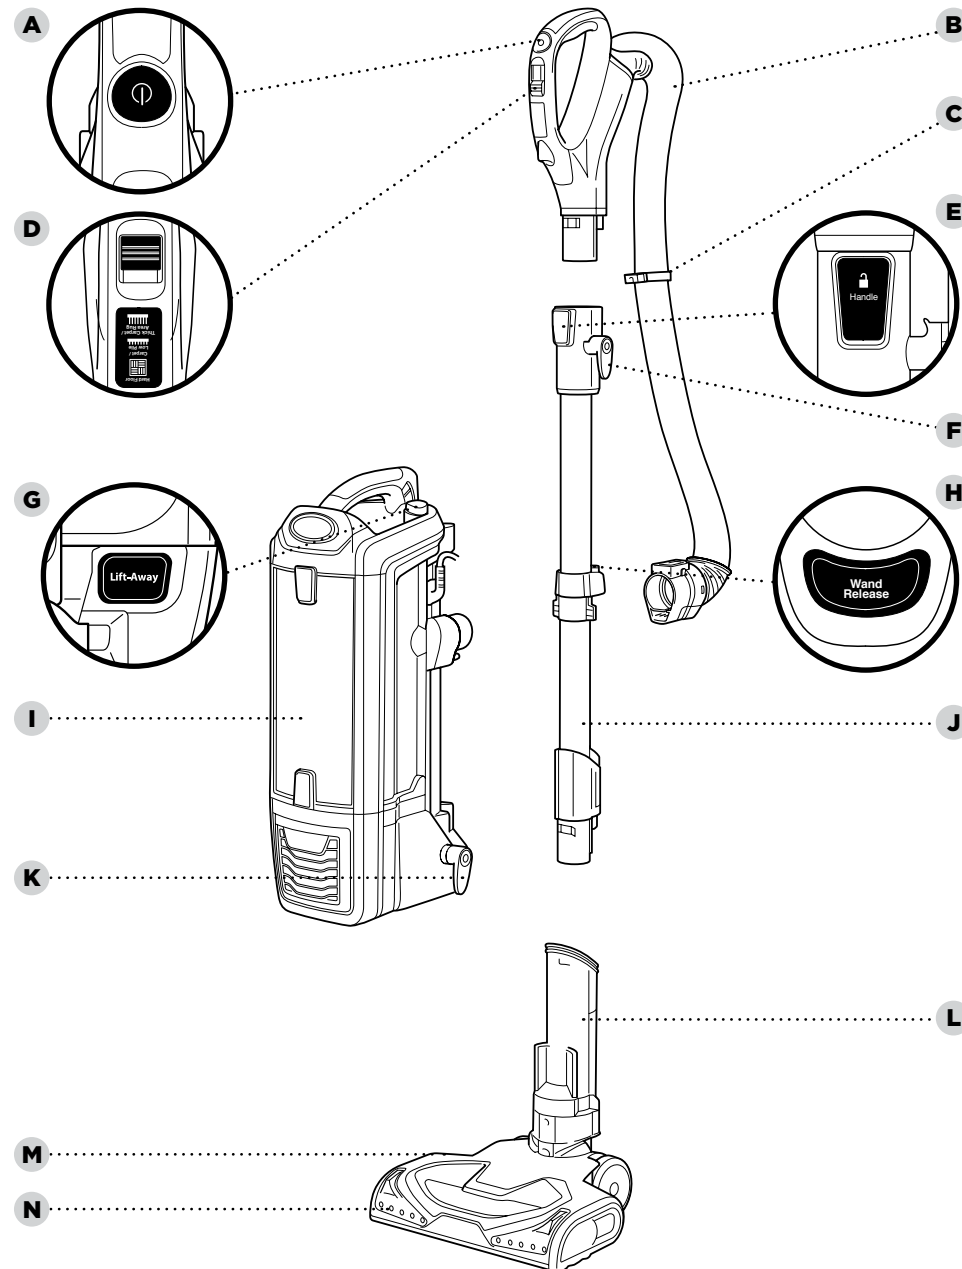


ASSEMBLING YOUR VACUUM


TIP: Slide hose clip into back of wand for convenience.

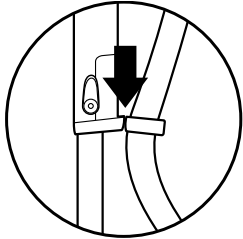


TIP: For quick cord access, rotate upper hook down and remove cord.

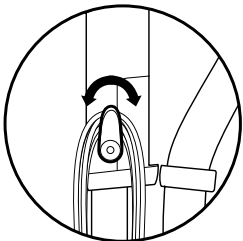

TIP: To store your vacuum, wrap cord around cord hooks.

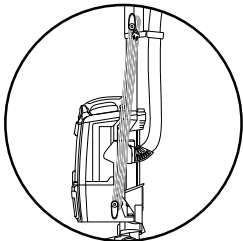


STEP 1

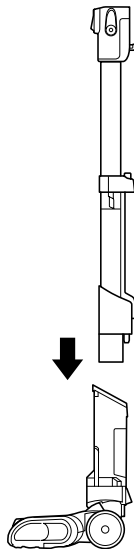


1 Place selected floor nozzle on floor and insert wand.

STEP 2

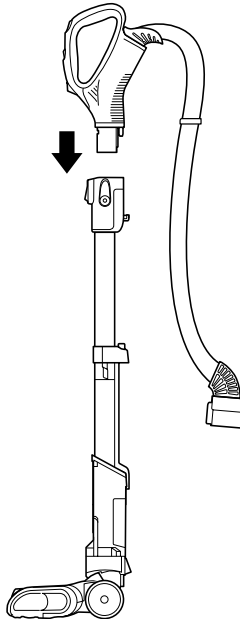


2 Insert handle into wand.

STEP 3

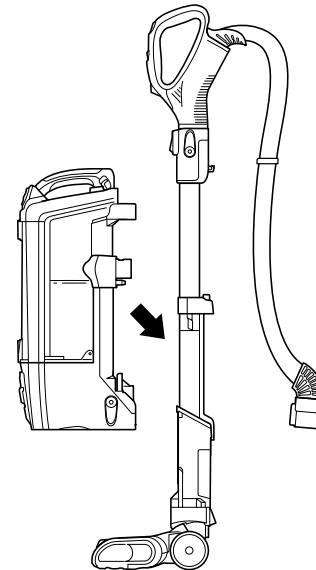


3 Place pod onto wand and slide down to connect.

STEP 4

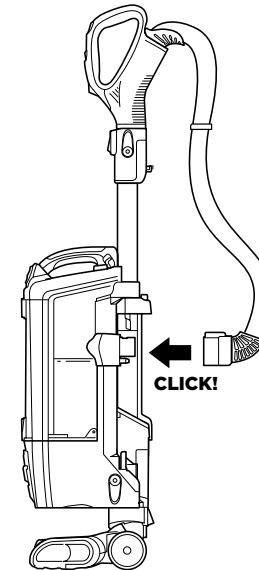

4 Connect hose into back of **pod**, pressing it in until it clicks into place.

STEP 5

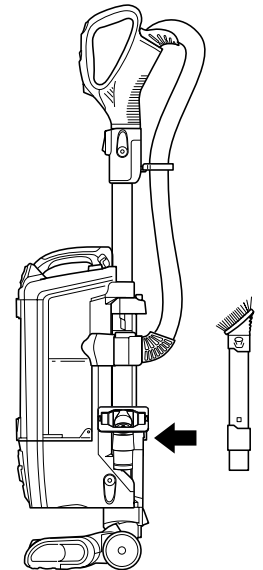

5 Place tools on their accessory posts.

USING YOUR VACUUM IN UPRIGHT MODE

WHAT DOES THE BRUSHROLL INDICATOR LIGHT MEAN?

Solid Green

The brushroll is on and working as it should.

Solid Red


There is a jam in the brushroll area. Turn your vacuum off and remove the blockage.

Flashing Red*

The motorized floor nozzle is overheating. Turn your vacuum off and wait for it to cool down. Next time you are vacuuming that surface, try opening the Suction Control.


No Light

The brushroll is off because the vacuum is in Hard Floor mode.

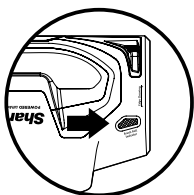


*See Troubleshooting section for further instructions.

STEP 1

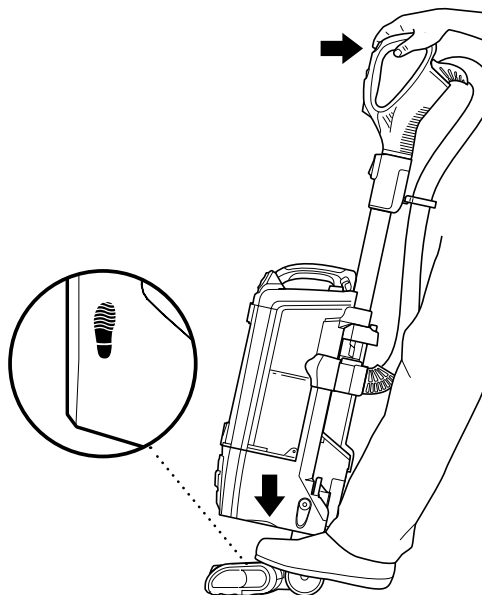

- 1 Plug power cord into outlet. Place foot on floor nozzle and tilt handle back.

STEP 2

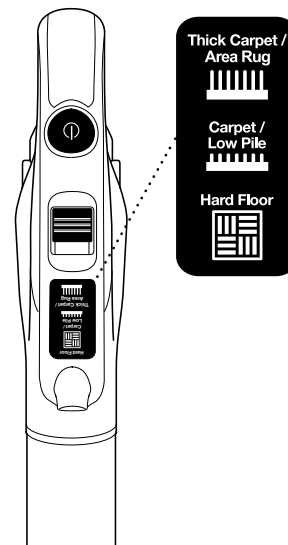

- 2 Choose the appropriate setting.

Thick Carpet & Area Rug Cleaning

Set floor selector to Thick Carpet/Area Rug.

Carpet & Low Pile Cleaning


Set floor selector to Carpet/Low Pile.

Hard Floor Cleaning

Set floor selector to Hard Floor.

NOTE: For deep cleaning per ASTM F 608 (embedded dirt in carpets) please set to Carpet/Low Pile.


STEP 3

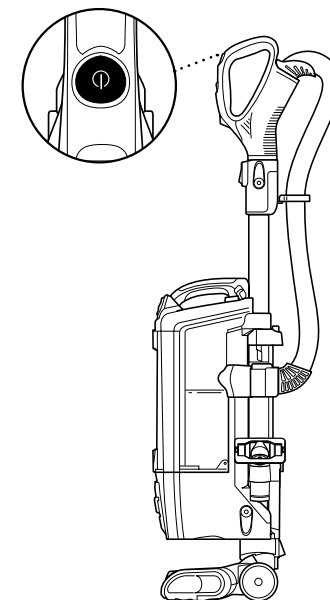

- 3 Press power button to turn vacuum on to start cleaning. The brushroll will not spin unless the wand is reclined.


USING YOUR VACUUM IN ABOVE-FLOOR MODE

STEP 1

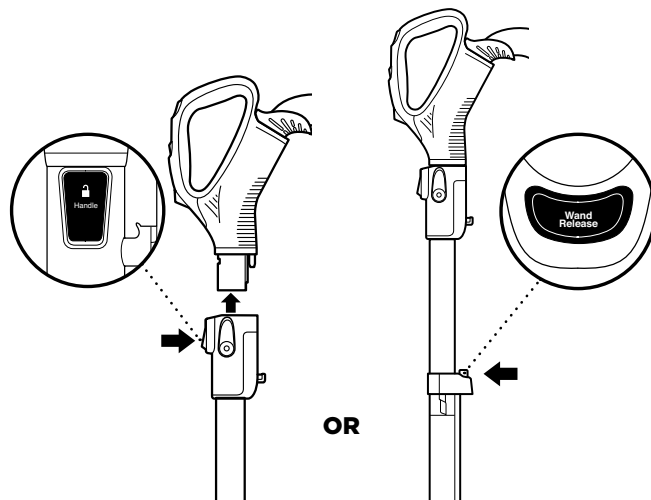

- 1** To clean with the handle or to attach an accessory to it, first press the Handle button to remove it from the wand. **OR** When you need more cleaning reach, press the Wand Release button to remove the wand from the floor nozzle.

STEP 2

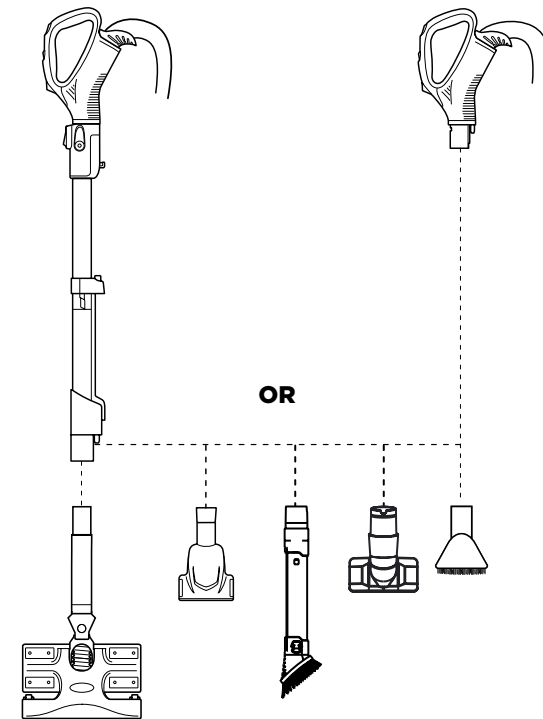


- 2** Attach desired accessory directly to wand or handle.

CHANGING YOUR FLOOR NOZZLES


If your vacuum comes with a Dust-Away® Hard Floor Attachment, use these instructions.

To purchase a Dust-Away Hard Floor Attachment, go to sharkaccessories.com

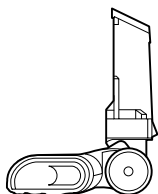

Motorized Floor Nozzle

Use the motorized floor nozzle for deep-cleaning carpets and picking up large debris on hard floors.

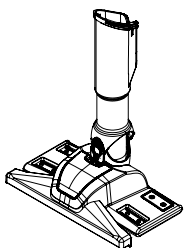


Dust-Away Hard Floor Attachment

Use the Dust-Away Hard Floor Attachment to pick up debris and wipe away fine dust on hard floors.


★ **IMPORTANT:** DO NOT use the Dust-Away Hard Floor Attachment without the microfiber pad attached.

STEP 1

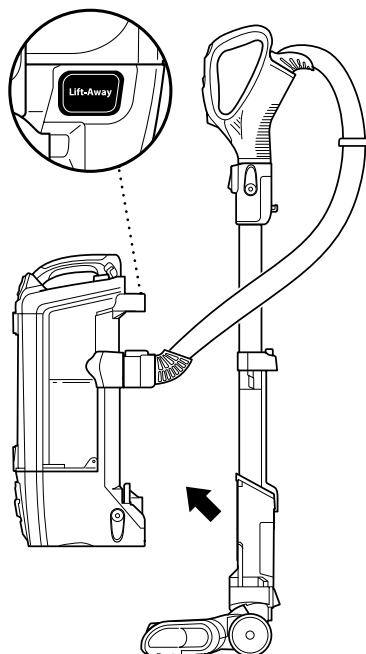


- 1 Press Lift-Away® button to lift pod off motorized floor nozzle.

STEP 2

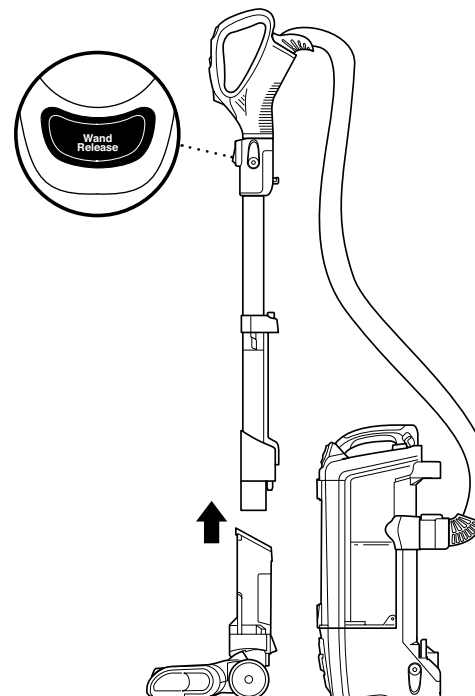

- 2 Press Wand Release button to remove wand from motorized floor nozzle.

STEP 3

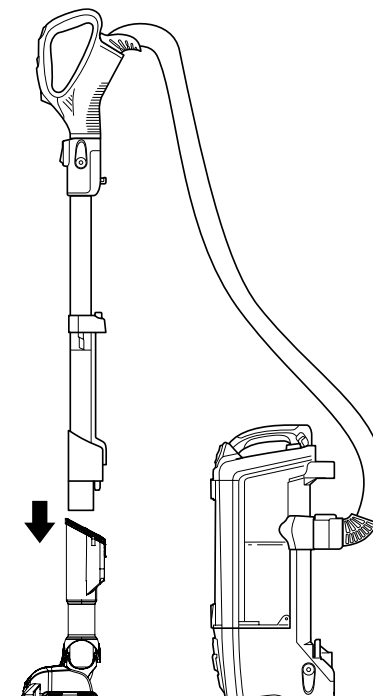


- 3 Insert wand into the Dust-Away® Hard Floor Attachment.
Hold pod in hand to clean in Lift-Away® mode. You cannot use the Dust-Away Hard Floor Attachment in regular upright mode.

USING YOUR VACUUM IN LIFT-AWAY® MODE

⚠ WARNING: Ensure solid footing when using in Lift-Away mode. Using the unit when it lacks stability may result in personal injury.


STEP 1

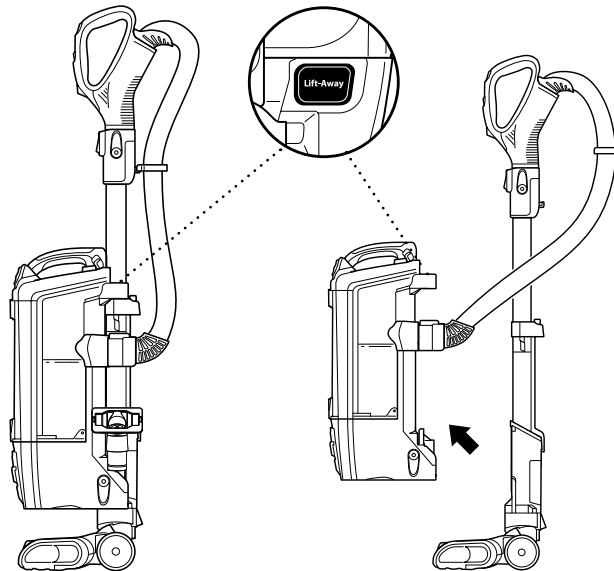

LIFT-AWAY CLEANING

- 1** Press Lift-Away button to lift pod off motorized floor nozzle. You are now ready to clean those hard-to-reach places.

STEP 2

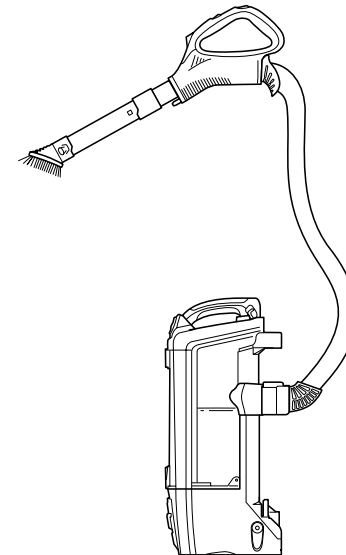

- 2** Attach desired accessory directly to handle. You can also attach the accessory to the wand for extended reach.


USING YOUR CADDY

If your vacuum comes with a caddy, use these instructions.


To purchase a caddy, go to sharkaccessories.com

TIP: Use the posts on the caddy to store additional cleaning accessories.


TIP: You can store the motorized floor nozzle on the back on the caddy.

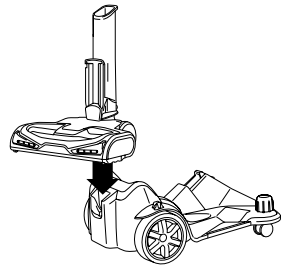

TIP: There is a cord clip on the caddy to help with cord management.

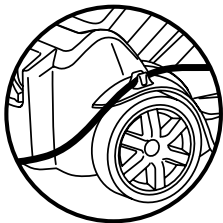


STEP 1

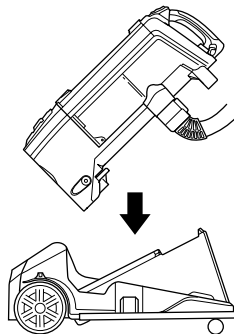


- 1 From Lift-Away® mode, place pod onto caddy.

STEP 2

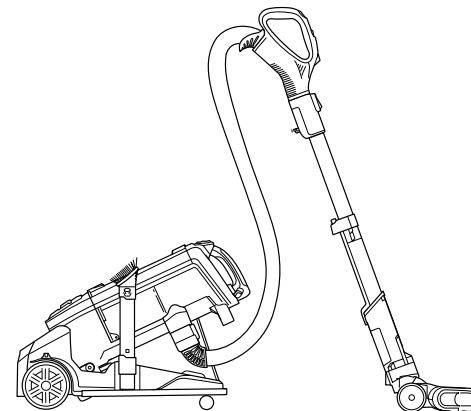

- 2 Cleaning in Powered Lift-Away® mode allows you to still use the motorized floor nozzle.

STEP 3

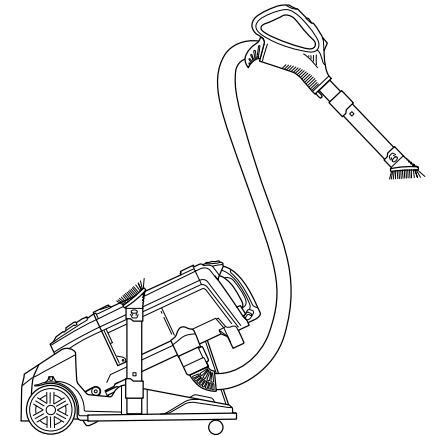

- 3 To clean **above-floor areas**, press the Wand Release or Handle button. Lift up and attach preferred accessory.

REMOVING POD FROM CADDY

When you are done cleaning with your caddy, press Lift-Away® button and lift pod up.

COMPATIBLE ACCESSORIES

There are a variety of accessories that are compatible with this vacuum series.

The top flap of your box shows the select accessories that are included with your model.

To purchase additional accessories, go to sharkaccessories.com

REPLACEMENT PARTS:

Crevice Tool

161FLI650

Upholstery Tool

159FLI650

Duster Crevice

158FLI650

Dust-Away (without LED)

XHFG650

Dust-Away (with LED)

XHGV755

Canister Caddy

XCAD650

Air-Driven Pet Brush

150FLI340

A 11" Crevice Tool

For cleaning hard-to-reach places.

C Duster Crevice

Two cleaning tools in one—the crevice tool gives you extended cleaning reach for small spaces, while the dusting brush cleans a multitude of surfaces.

E Caddy

Transforms your Rotator® into a canister vacuum, giving you the freedom to roll the pod along while keeping cleaning tools close by.

B Upholstery Tool







Designed for removing stubborn pet hair from upholstery and more.

D Dust-Away® Hard Floor Attachment

Durable enough for big crumbs and debris but gentle enough for delicate dusting on hardwood and tile floors.

F Air-Driven Pet Brush

Grabs pet hair, loose debris, and dander out of upholstery and surfaces.

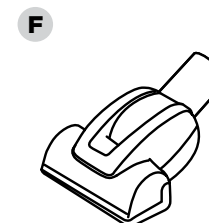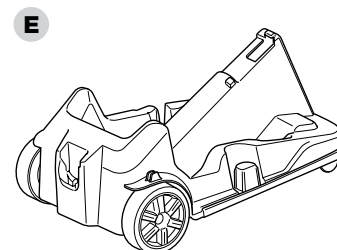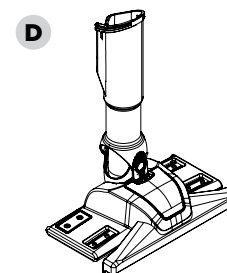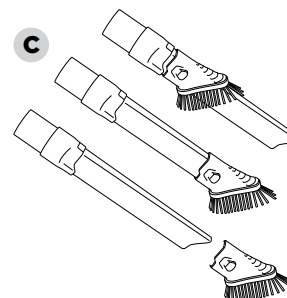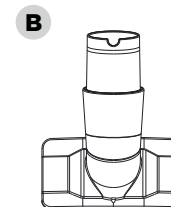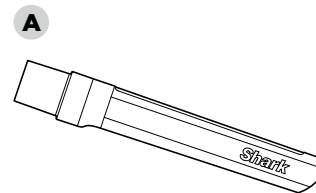

MAINTENANCE

To keep your vacuum's suction power optimal, follow these instructions. Make sure unit is off and cord is unplugged.

⚠ WARNING: To reduce the risk of shock and unintended operation, turn off power and unplug unit before servicing.

Hand wash filters only with water to prevent damage from cleaning chemicals. Allow ALL filters to air-dry completely before replacing them in the vacuum to prevent liquid from being drawn into electric parts.


★ IMPORTANT: DO NOT use soap when cleaning the filters.

RECOMMENDED FILTER CLEANING SCHEDULE:


Pre-Motor Filter Kit
(Foam & Felt)
XFF755
Clean every 3 months.

Post-Motor Filter
(HEPA)
XHF650
Clean once a year.

STEP 1

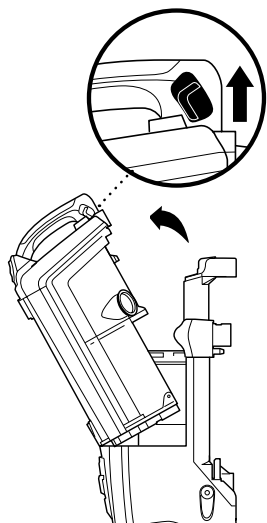


STEP 2

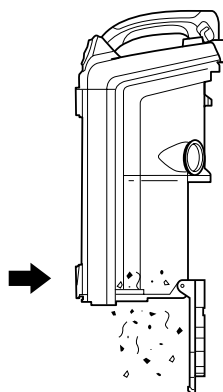

EMPTYING THE DUST CUP

- 1 Pull up on dust cup release latch and lift dust cup off pod.
- 2 Hold dust cup over a trash bin and press the empty-release latch on the bottom.

STEP 3

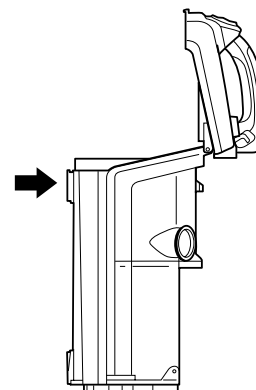

- 3 Press release latch on top of the dust cup to access dust screen and remove built-up debris as required.

FOAM FILTER




FILTER FRAME



FELT FILTER



HEPA

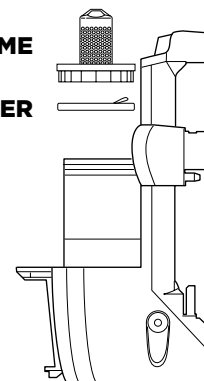


CLEANING THE FILTERS

1 Pre-Motor (foam and felt):

With the dust cup removed, take out and rinse the foam and felt filters with water. Tap loose dirt off filters between washes as needed.

2 Post-Motor (HEPA):


To access the HEPA filter, reach under the grill and pull the Filter Access latch to remove the grill. Remove and rinse the HEPA filter.

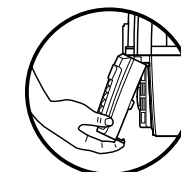

⚠ WARNING: To reduce the risk of shock and unintended operation, turn off power and unplug unit before servicing.

💡 TIP: You do not need any tools to open the motorized floor nozzle—just a coin.


STEP 1

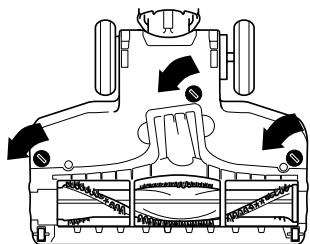

CHECKING FOR BLOCKAGES & MAINTAINING BRUSHROLL


- 1 Use a coin to unlock the 3 locks on the bottom of the floor nozzle. Place edge of coin in lock slot, and turn clockwise to open.

STEP 2

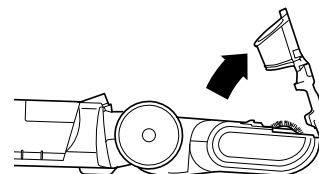


- 2 Open the hinged cover on the motorized floor nozzle to access the brushroll and expose the airway. Shine a flashlight from the bottom of the base to check for blockages.

STEP 3

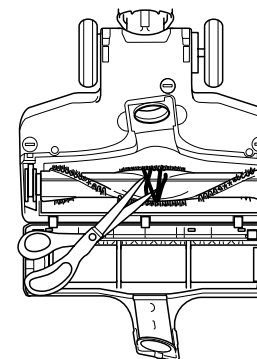

- 3 Remove any fibers, debris, or hair that is wrapped around the brushroll. Loosen debris by running a pair of scissors along the groove in the brushroll.

STEP 4

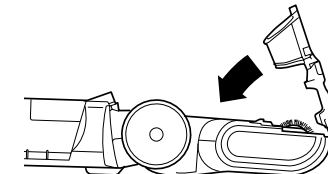

- 4 When finished, line the cover up along the front of the nozzle, then push closed. Use the edge of a coin to close the three locks.

TROUBLESHOOTING GUIDE

⚠ WARNING: To reduce the risk of shock and unintended operation, turn off power and unplug unit before servicing.

Vacuum is not picking up debris. No suction or light suction.
(Refer to Maintenance section for more information.)

- Check filters to see if they need cleaning. Follow instructions for rinsing and drying the filters before reinserting in the vacuum.
- Dust cup may be full; empty dust cup.
- Check hose, hose connections, wand, nozzles, and accessories for blockages; clear blockages if required.
- Remove any string, carpet fibers, or hair that may be wrapped around the brushroll.

Vacuum lifts area rugs.

- Turn off unit to disengage the brushroll. Move switch to Hard Floor setting for suction-only cleaning, and turn unit back on.
- Suction is powerful. Take care when vacuuming area rugs or rugs with delicately sewn edges.

Brushroll does not spin.

- If Brushroll Indicator Light on the motorized floor nozzle turns red, the brushroll has stopped spinning. Immediately turn off and unplug vacuum, disconnect the nozzle, and remove blockage before reconnecting and turning vacuum back on.
- With the power on, recline the handle, which will automatically turn on the brushroll.
- Make sure the carpet height selector is not set to Hard Floor.
- If Carpet/Low Pile setting was used, try the Thick Carpet/Area Rug setting.

Vacuum turns off on its own or indicator light flashes red.

- This vacuum is equipped with a motor-protective thermostat. If your vacuum overheats, the thermostat will automatically turn the suction motor off. Perform the following steps to restart the thermostat:
 1. Turn vacuum off and unplug it.
 2. Empty dust cup and clean filters (see Maintenance section).
 3. Check for blockages in hose, accessories, and inlet openings.
 4. Allow unit to cool for a minimum of 45 minutes.
 5. Plug in vacuum and turn it on.
- If hose is not fully connected to the pod, it can cause a poor electrical connection and the hose can come loose, turning the vacuum off.
 1. Turn vacuum off and unplug it.
 2. Empty dust cup and clean filters.
 3. Check for blockages in hose, accessories, and inlet openings.
 4. Remove cord from cord hook so hose latch can be seen and engaged.
 5. Ensure that hose, wand, and handle are all clicked securely into place at all connection points:
 - a. Where hose meets back of pod (may require additional force; pull on hose to ensure latch is fully engaged)
 - b. Where wand plugs into floor nozzle
 - c. Where handle plugs into wand
 6. Plug in vacuum and turn it on.

Note: If vacuum still does not start, contact Customer Service at 1-800-798-7398.

Shark NINJA SEVEN (7) YEAR LIMITED WARRANTY

The 7-Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of 7 years from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

What is covered in my warranty?

1. The original unit and/or non-wearable components deemed defective, in SharkNinja's sole discretion, will be repaired or replaced for up to 7 years from the original purchase date.
2. In the rare event that a replacement unit is issued, the warranty coverage ends six months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is greater. If the unit is replaced, SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered in my warranty?

Our Customer Service/Product Specialists are available to provide all the warranty service options available to you, including the possibility of upgrading to our VIP Warranty Service Options for select product categories.

1. Normal wear and tear of wearable parts such foam filters, HEPA filters, pads etc., which require regular maintenance and/or replacement to ensure the proper functioning of your unit are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.
3. SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$19.95 for return shipping costs will be charged at the time of return shipment of the repaired or replacement unit. Our Customer Service /Product Specialists are available to provide all the warranty service options available to you, including upgrading to our VIP Warranty Service Options.
4. Damage caused by misuse, abuse, or negligent handling, or damage due to mishandling in transit.
5. Consequential and incidental damages.
6. Defects caused by or resulting from damages from shipping or repairs, service, or alteration to the product or any of its parts which have been performed by a repair person not authorized by SharkNinja.
7. Products purchased, used or operated outside of North America.

Problems with your unit/How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit sharkclean.com for product care/maintenance self-help. Our Customer Service and product specialists are also available at 1-800-798-7398 to assist with product support and warranty service options.

How to initiate a warranty claim

You can call 1-800-798-7398 to have a Customer Service specialist assist you. Please note you must call 1-800-798-7398 to initiate a warranty claim. Return and Packing Instruction information will be provided at that time.

For Customer Service hours, visit sharkclean.com.

Replacement parts are available for purchase at sharkaccessories.com. For more information on which parts are classified as wearable and non-wearable, please visit sharkclean.com/warranty

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.



SharkNinja Operating LLC
US: Newton, MA 02459
CAN: Ville St-Laurent, QC H4S 1A7
1-800-798-7398
sharkclean.com

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

DUST-AWAY, LIFT-AWAY, ROTATOR, and SHARK are registered trademarks of SharkNinja Operating LLC.

For SharkNinja U.S. Patent information visit sharkninja.com/USPatents

