 


SharkTM

**FlexBreezeTM HydroGo
Fan**

FA052Q Series

OWNER'S GUIDE

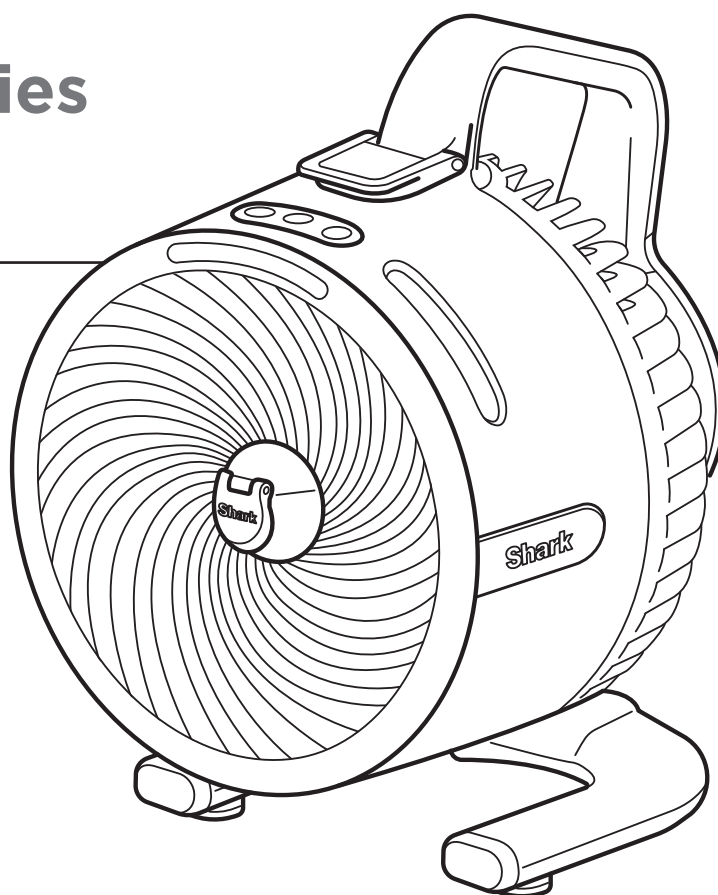

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.


NOTE: After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

1. This appliance is operated by a rechargeable battery. **ONLY** recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model ZD036T120300US from E-TEK, or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
4. The fan should be used on a stable and level surface.
5. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
6. Do not operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
7. Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
8. If the charger cord is damaged, it should be replaced.
9. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they **DO NOT** play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
13. Only use Shark branded accessories.
14. Do not use if appliance is not working as it should, has been damaged, or dropped into water.
15. Turn off all controls before plugging in or unplugging the appliance.
16. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
17. Hand wash exterior/hard plastic/non-electronic parts with damp cloth and water only.
18. Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
19. Do not force discharge, recharge, disassemble, heat above 140°F (60°C), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
20. The misting feature is suitable for indoor and outdoor use. This product is **NOT** a humidifier.
21. Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use distilled, warm, or hot water. Only use cold or room temperature water.
22. **DO NOT** handle live electrical products while in range of the misting stream.
23. Keep non-waterproof electronic equipment and appliances out of the misting stream.
24. To avoid accidental damage or injury **DO NOT** touch the metal misting plate while the unit is on.
25. **DO NOT** attempt to operate the misting feature with an empty water tank. The metal misting plate may reach high temperatures if operated without water.
26. **WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.

27. **DO NOT** use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.

 **WARNING: Not suitable for use with solid-state speed controls.**

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. **DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:**
 - a. Open
 - b. Drop
 - c. Short-circuit
 - d. Puncture
 - e. Incinerate
 - f. Expose to temperatures
2. Keep battery pack dry.
3. Charge battery pack only according to its charger's instructions.
4. Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable). **DO NOT** incinerate or compost the product with its integral battery. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. Do not use an extension cord.
3. Do not use within 10 feet of pool and do not use in a bathroom.
4. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS

Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

CAR CHARGER

INSTRUCTIONS FOR USE:

1. Firmly insert the car charger plug into a 12-volt outlet in your vehicle.
2. Insert the charger connector into the charging port on the back of the fan head.



CAR CHARGER

⚠ IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

1. **SAVE THESE INSTRUCTIONS.**
This manual contains important safety and operating instructions for battery charger model FAX5XCAR from Ningbo Junlai Electrical Appliance Co., Ltd.
2. Before using this battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using battery.
3. **CAUTION:** To reduce risk of injury, charge only the provided rechargeable battery. Other types of batteries may burst, causing injury to persons and damage.
4. **DO NOT** expose charger to rain, moisture, or snow.
5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
6. To reduce damage to car charger and cord, do not attempt to remove the charger from the outlet by pulling the cord. Pull the entire car charger connection from the outlet.
7. To reduce risk of electric shock, unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
8. **DO NOT** operate the car charger if any components are damaged.
9. To clean the charger, first unplug it, then gently wipe it with a damp cloth. Allow the charger to air-dry completely before using it.
10. The charger uses a replaceable 5-amp fuse. To remove the fuse, unscrew the chrome knob at the tip of the charging plug. Use only 5-amp fuses for replacement.

READ AND SAVE THESE INSTRUCTIONS

WHAT'S INCLUDED

Includes:

- Fan
- Charger



Charger
(Reference image only)



Fan
(Already assembled)

FEATURES

CORDLESS	OUTDOORS	VERTICAL TILT	BREEZEBOOST™ MODE	MISTING
This is a 2-in-1 fan that can be used with or without the cord.	This fan can be enjoyed indoors or outdoors. DO NOT CHARGE OR USE IN THE RAIN.	Direct the airflow by manually adjusting the vertical tilt up to 45° degrees.	Activate the extra-powerful BreezeBoost Mode for maximum-strength air flow.	Integrated misting suitable for both indoor and outdoor usage.

HOW TO USE YOUR FAN

Fan Speed		Power	Misting Modes	
<p>Press on the fan head to cycle between fan settings: Fan speeds 1-5 BreezeBoost™ NaturalBreeze</p> <p>LED lights will indicate selected fan setting. See the Owner's Guide for more details.</p>		<p>Press on the fan head to turn the fan on. The battery LED will indicate how much power your fan has:</p> <ul style="list-style-type: none"> 70%-100%: green light 30%-69%: amber light 6%-29%: red light steady 5% and below: red light blinking 	<p>Press on the fan head to cycle between mist settings: Consistent Interval OFF</p> <p>LED lights will indicate selected mist setting. See the Owner's Guide for more details.</p> <p>Tip: Try adjusting the fan speed while misting to customize your cooling experience.</p>	
Fan ONLY Runtime	MAXIMUM CORDLESS RUNTIME: 12 hours on fan speed 1. AVERAGE CORDLESS RUNTIME: 4 hours on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 1.5 hours on fan speed 5. PLUGGED IN: indefinite runtime; fan will charge while operating.		Mist Runtime	MAXIMUM MISTING RUNTIME: Up to 60 minutes of Interval misting per tank at any fan speed. MAXIMUM MISTING PERFORMANCE: Up to 30 minutes of Consistent misting per tank at any fan speed. Note: The mister will automatically turn off after 1 hour in Consistent mode or 2 hours in Interval mode. This prevents dry running and system damage. See Owner's Guide for more information.
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 3 hours			

HOW TO DRY YOUR FAN

1. First, empty all the water out of the tank: Hold the fan over a drain, open the water tank cap, then turn the fan upside down and allow all water to drain out.
2. Place the fan upright on a level, stable surface. Open the misting cap on the front grill of the fan, then turn on the misting function for 5 seconds to clear any remaining water from the system.
3. Place the fan in a well-ventilated space and allow it to air-dry completely.

NOTE: Leave the water fill port open for 24 hours before closing and storing the unit.



VERTICAL TILT

Fan head tilted UP

 


Fan head tilted DOWN



HOW TO CHARGE YOUR FAN

To charge the fan, insert the charger into the charging port on the back of the fan head. **DO NOT CHARGE OR USE IN THE RAIN.**

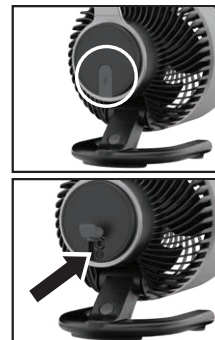

After every use, empty the water tank and let it dry completely to prevent stagnant water from being misted.

BATTERY LIFE

Settings	Runtime
Fan Speed 1	12.0 hours
Fan Speed 1 + Mist	4.0 hours
Fan Speed 2	7.0 hours
Fan Speed 2 + Mist	3.5 hours
Fan Speed 3	4.0 hours
Fan Speed 3 + Mist	2.0 hours
Fan Speed 4	2.0 hours
Fan Speed 4 + Mist	1.5 hours

Settings	Runtime
Fan Speed 5	1.0 hours
Fan Speed 5 + Mist	1.0 hour
BreezeBoost Mode	1.0 hour
BreezeBoost Mode + Mist	45 minutes
Strong Breeze	2.0 hours
Strong Breeze + Mist	1.5 hours
Gentle Breeze	7.0 hours
Gentle Breeze + Mist	3.5 hours

SWAPPABLE BASE

The base is removable, so you can swap in different bases or add accessories that suit your needs.



1. To remove the base, gently press the release button and pull the base downward off the fan head post.



2. To reinstall the base, slide it onto the fan head post, over the button, until it clicks into place.

STORAGE

STORAGE TYPE	INSTRUCTIONS
Short-term storage (less than 24 hours).	Carefully place the fan in the desired storage location. Ensure it is out of reach of children and pets. Bring the fan indoors if inclement weather is predicted.
Long-term storage (more than 24 hours).	Carefully place the fan in the desired storage location. Store the fan indoors when not in use for long periods. Always make sure to keep the fan out of reach of children and pets.

SETTINGS

- Before first cordless use, make sure to fully charge the fan.
- For information on how to activate or deactivate LOCK MODE for fan maintenance or travel, please see the Maintenance section.

POWER ON/OFF

To turn the fan on or off, press the **POWER** button on the fan head.



5-SPEED MODELS

ON


OFF

 
DISPLAY






LED animations will play once
(LEDs will turn on from left to right, then turn off from right to left)

LED animation will play once
(LEDs will turn off from right to left)

FAN SPEEDS

Changing the **FAN SPEED** will increase or decrease the airflow of the fan. There are 5 fan speed settings.
To change the speed, press the fan speed  icon on the fan head to cycle through the different speeds.




 
SPEED	DISPLAY (5-SPEED MODELS)	BEST FOR
1		Quiet operation
2		Moderate cooling
3		Balance of noise level and fan power
4		Air circulation
5		High-power cooling


BREEZEBOOST™ MODE

Turn on BreezeBoost for maximum-power airflow. When operating cordlessly, BreezeBoost will automatically turn off after 20 minutes to save battery. BreezeBoost will run indefinitely when the fan is plugged in.

To activate BreezeBoost, press fan icon until you see the LED pattern described below.


To deactivate BreezeBoost, press the fan speed  icon on the on the fan head until you reach your desired fan speed setting.





DISPLAY	SPEED	BEST FOR
 LED animation will repeat 5 times (LEDs will turn on from left to right)	BreezeBoost	Maximizing fan power

 
NATURALBREEZE MODES



Turn on either of the NaturalBreeze modes to simulate natural wind conditions.

To activate **STRONG** NaturalBreeze, press the fan speed  icon until the corresponding LEDs are displayed on the unit (see table below for LED patterns).

To transition from **STRONG** NaturalBreeze to **GENTLE** NaturalBreeze, press the fan speed  icon on the fan head again.

To deactivate NaturalBreeze, press the fan speed  icon on the on the fan head until you reach your desired fan speed setting.



DISPLAY	SETTING	BEST FOR
	STRONG NaturalBreeze	Simulating strong wind conditions
	GENTLE NaturalBreeze	Simulating gentle wind conditions

NATURALBREEZE WIND PATTERNS

STRONG NaturalBreeze Mode	GENTLE NaturalBreeze Mode
<ul style="list-style-type: none">• 6 seconds in Speed 3• 5 seconds in Speed 4• 4 seconds in Speed 5• 5 seconds in Speed 4• The sequence will repeat	<ul style="list-style-type: none">• 6 seconds in Speed 1• 5 seconds in Speed 2• 4 seconds in Speed 3• 5 seconds in Speed 2• The sequence will repeat

MISTING

 
The misting feature is suitable for both indoor and outdoor use.

Choose between 2 misting settings to best suit your needs. To change the misting settings, press the Misting ☼ icon on the fan head to cycle through the settings.

 
To turn off misting, press and hold the Misting ☼ icon on the fan head until no LEDs are illuminated.



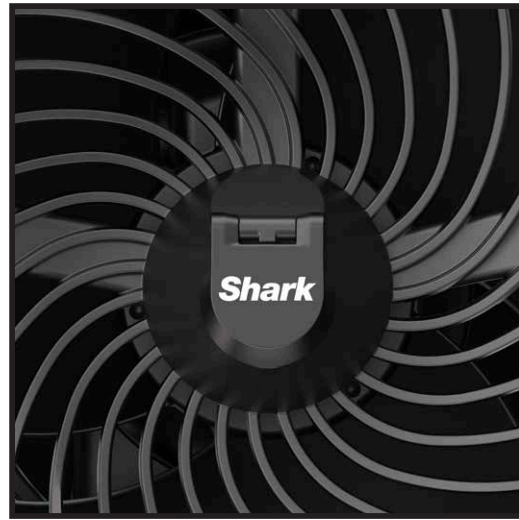

To enable misting, **OPEN** the misting cap in the center of the fan grill.



When done misting, **CLOSE** the cap to prevent dripping.



DISPLAY	SETTING	BEST FOR
	Consistent	Maximum cooling power
	Interval	Longest misting duration

Note: Misting will automatically shut off after 1 hour in Consistent mode and 2 hours in Interval mode to prevent dry running and damaging the system.

If you refill the water tank during use, the timer may turn off misting. To reactivate mist, press the Misting ☼ icon on top of the fan head. Repeat as needed. **DO NOT** attempt to mist with an empty water tank.

TROUBLESHOOTING AND FREQUENTLY ASKED QUESTIONS

GENERAL USE	Why are the UI buttons on the fan head not working?	<p>Make sure the fan has battery power by pressing the Power button. If the Battery LED indicator blinks red, then the fan needs to be charged. When the fan is charging, the battery LED will blink green. See the Battery Life and How To Use Your Fan sections for more detailed information on runtimes and battery indicators.</p> <p>If all the LEDs are flashing, the fan may be in Lock mode, which deactivates the fan to allow you to safely maintain or travel with it. To turn off Lock mode, press the Power (⏻) icon on the fan and hold it down for 8 seconds. When Lock mode is successfully deactivated, the LEDs will display the Power On pattern. See the Maintenance section for more information.</p>
	Why is the battery light flashing red when I am trying to turn on BreezeBoost™ mode?	If the battery level is low, BreezeBoost mode cannot be activated. Charge the fan battery to use BreezeBoost.
	Why are the misting and battery lights flashing when I try to activate the misting feature?	If the battery level is low, the misting feature cannot be activated. Charge the fan battery to use misting.
	Why did misting shut off?	<p>Misting will automatically shut off after 1 hour in Consistent mode and 2 hours in Interval mode to prevent dry running and damaging the system.</p> <p>If you refill the water tank during use, the timer may turn off misting. To reactivate mist, press the Misting (💧) icon on top of the fan head. Repeat as needed.</p> <p>DO NOT attempt to mist with an empty water tank.</p>
	Can I leave the fan outdoors?	This fan is rain-resistant and will not be damaged by light rain. However, it is not suitable to withstand heavy rain or water submersion. Do not charge or use your fan in the rain.
	The second LED indicator and the Battery LED (in amber) are flashing. What is wrong?	This error state indicates an issue with the voltage of the charger. Please be sure to only use the provided Shark™ charging cable and power supply.
MAINTENANCE	Why do I have to activate Lock mode before maintenance?	<p>The fan must be in Lock mode when any maintenance is performed. Lock mode prevents the fan from accidentally powering on.</p> <p>It is also recommended to activate Lock mode when traveling with the fan. See the Maintenance section for more information.</p>
	How often should I clean the fan?	We recommend cleaning the fan every 6 months or as needed
	How do I maintain the fan head?	Every 12 months or as needed, use a damp cloth to wipe down the external surfaces of the fan to prevent buildup.
	How often should I clean the misting system?	Clean the misting system every week or as needed. Using harder water will require more frequent cleaning. See Maintenance section for more information on cleaning the misting system.
	Why isn't my fan misting effectively?	Ensure the misting cap located in the center of the fan gill is fully open. See the Misting section for more information. The misting system may clog if not maintained properly. See the Maintenance section for details on cleaning instructions.

MAINTENANCE

CLEAN SOAK

It is recommended to perform a clean soak every week or as needed. Ensure you empty and dry the water tank completely after every use. To perform a clean soak:

 
1. Activate **LOCK MODE** by holding down the power button for 8 seconds until the lights flash. This will temporarily disable all fan functions to prevent the fan from accidentally turning on during maintenance.
2. Fill the water tank with 5 ounces of undiluted distilled white vinegar (5% acetic acid by volume) and let sit for 5-7 minutes. **DO NOT** let the vinegar sit for more than 15 minutes.
3. Carefully dump the vinegar out of the tank.
4. Refill the tank with clean tap or filtered water. Do not use distilled water.
5. Ensure the water tank and misting cap are fully sealed, then shake the unit for 10 seconds.
6. Carefully dump the water out of the tank.
7. Repeat steps 4, 5 and 6 once more to thoroughly rinse the water tank.
8. Deactivate **LOCK MODE** by holding down the power button for 8 seconds until the lights show the startup pattern. Please allow the water tank to dry completely before using the unit again.

LOCK MODE

- Lock mode temporarily blocks all fan functions for 24 hours to prevent the fan from accidentally powering on during fan head maintenance or travel.

1.

Hold for 8 seconds

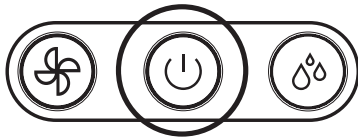

Lights will blink three times when Lock mode has been activated

2.



2. Lock mode will automatically deactivate after 24 hours.

3.

Hold for 8 seconds



Lights will show the Power On pattern when Lock mode has been deactivated

1. Activate Lock mode before traveling to prevent the fan from accidentally powering on during transport. To activate, hold down the **POWER** icon on the fan head for 8 seconds until the LEDs flash three times.

3. If you wish to deactivate Lock mode before 24 hours, hold down the **POWER** icon on the fan head for 8 seconds until the LEDs show the Power On pattern.

TWO (2) YEAR LIMITED WARRANTY

The Two (2) Year Limited Warranty applies to purchases made from authorized retailers of **SharkNinja Operating LLC**. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of two (2) years from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

CA RESIDENTS ONLY:

The Two (2) Year Limited Warranty period begins on the original date of delivery or pick-up.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to two (2) years from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. SharkNinja reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as batteries, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at sharkaccessories.com.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., not replacing the filters), or damage due to mishandling in transit.

4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used, or operated outside North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit sharkclean.com/support for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-855-523-4061** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at registryyourshark.com and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$25.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call **1-855-523-4061** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at registryyourshark.com and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

IMPORTANT INFORMATION

REGISTER YOUR PURCHASE



registryyourshark.com



Scan QR code using mobile device



RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V~ 60Hz / 3A
Watts: 36W
4000 mAh

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

TIP: You can find the model and serial numbers on the QR code label on the underside of the fan head.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark™ fan.

SharkNinja Operating LLC
US: Needham, MA 02494
CAN: Ville St-Laurent, QC H4S 1A7
1-800-798-7398
sharkclean.com

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (non-replaceable). **DO NOT** incinerate or compost the product with its integral battery. When the fan battery can no longer hold a charge, dispose of it or recycle it (with integral battery) in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.



FCC WARNINGS

Note: This unit has been tested and found to comply with FCC limits for Class B digital devices. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To see if this unit interferes with radio or television reception, try turning it off and on.

To correct any interference:

- Reorient or relocate the receiving antenna.
- Increase the distance between the unit and the receiver.
- Connect the unit to a different outlet than the receiver.
- Consult the dealer or an experienced technician for help.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate it.