MAINTENANCE

Brushroll/Soft Roller Access

1. To open the brushroll garage, slide both release buttons on the floor nozzle away from you, towards the back of the nozzle. then lift off the lid.

2. To close the brushroll garage, insert the 3 tabs on top of lid into the 3 slots in the nozzle, then push down on both sides of lid until it clicks securely into place. If Brushroll Indicator Light is green and headlights are flashing, check again that both sides of lid are locked in place.








Brushroll Maintenance

With the garage lid removed, carefully clear away any debris that may be impeding the brushroll.



NOTE: If you see any hair wrapped around the brushroll, continue cleaning, using Setting II, Carpet, on bare floors. This will allow the self-cleaning brushroll to remove the hair wrap and send it to the dust cup.

Empty the dust cup every time debris reaches the MAX fill line.

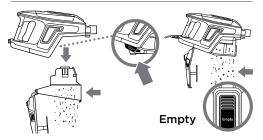


Cleaning the Soft Roller

Lift out the Soft Roller by pulling the tab on the right side. Clear away any debris, then slide the Soft Roller back into place.



Checking the Nozzle for Blockages

 Tilt the neck of the nozzle back to straighten the airway, then remove any blockages.



HAVING TROUBLE?

ISSUE

Vacuum lifts area rugs.

Solution

Turn off the unit to disengage the brushroll and restart with the Power button.

ISSUE

Vacuum is not picking up debris. No suction or light suction.

Solution

Empty dust cup, clean filters, check all openings for blockages.

For questions or to register your product, visit us online at sharkclean.com

© 2020 SharkNinja Operating LLC. APEX, DUOCLEAN, and SHARK are registered trademarks



Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

Snark

APEX® **Corded Stick Vac with Self-Cleaning Brushroll**

QS360Q

QUICK **START GUIDE**

Register your vacuum at registeryourshark.com

For additional parts and accessories, visit sharkaccessories.com







WHAT'S INSIDE:

- A Handheld Vacuum
- Motorized Floor Nozzle
- Wand
- Crevice Tool



- Onboard Storage Clip
- © Precision Duster
- Under-Appliance Wand

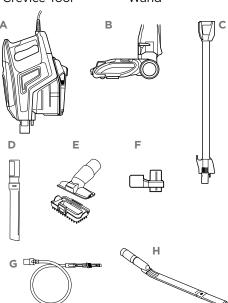

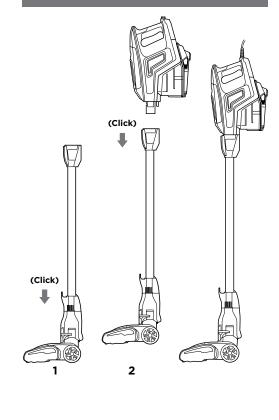

ASSEMBLY

DUOCLEAN® TECHNOLOGY

ON FLOORS

Direct engagement with the Soft Roller removes large particles, small particles. and stuck-on dust. Slide the power switch to position I for Bare Floor/Small Area Rugs, or II for Carpets. To turn off power, slide the switch to O.

Setting I: Bare Floor/Small Area Rugs



ON CARPETS*

The Soft Roller pulls in large particles, while the deep-cleaning brushroll removes embedded fine dirt.

Setting II: Carpet

Optimized brushroll speed for carpets.

The brushrolls will spin faster to help pick up debris below the surface.



VERSATILE FLOOR-TO-CEILING CLEANING

UPRIGHT MODE

 
To clean floors, step on the floor nozzle and tilt the handheld vacuum back.



NOTE: All accessories are compatible with both the wand and the handheld vacuum. Use Setting I, Bare Floor/Small Area Rugs, with all above-floor accessories.


ABOVE-FLOOR WITH WAND

Stand the vacuum upright. Step on the foot pedal on the bottom left side of the floor nozzle and pull the wand up to disconnect it. Great for cleaning baseboards, ceiling fans, window sills, etc.



ABOVE-FLOOR WITH HANDHELD

Press the Wand Release button and lift the handheld vacuum off the wand. Great for cleaning stairs and furniture.

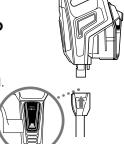

STORAGE

ONBOARD HOOK

Hang the handheld vacuum on the hook on the bottom of the wand, and wrap the power cord around the cord hooks.

NOTE: Wrap the power cord around the top hook first, leaving a little slack while wrapping.

