

Shark


LIFT-AWAY® PRO STEAM POCKET® MOP With Intelligent Steam Control®

QUICK START GUIDE

WHAT'S INSIDE

- | | |
|-------------------------------------|------------------------------------------------|
| A Steam Mop Handle | F Filling Flask |
| B Steam Mop Body | G Accessory Hose |
| C Removable Handheld Steamer | H Garment Steamer |
| D Intelli-Mop™ Head | I Small Above-Floor Pocket Tool and Pad |
| E Dirt Grip™ Pad (x2) | |


ASSEMBLY

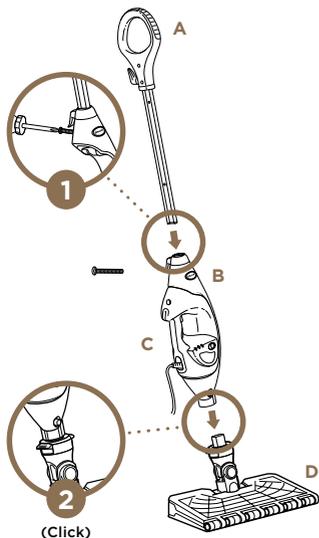

1. Screw the mop handle into the Steam Mop body (screwdriver not included)
2. Slide the Intelli-Mop Head post into the Steam Mop body. Push until you hear it click securely into place.


FILLING THE WATER TANK

1. Open the water tank cap.
2. Use the filling flask and pour water into the tank. Do not overfill. Replace the cap on the water tank.

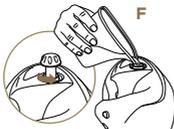


TOUCH-FREE TECHNOLOGY


1. Lift the mop straight up by the handle until the Intelli-Mop Head is hanging straight down. Center the mop head above the pad. Press down the release buttons on the sides of the head post, and both sides of the mop head will drop open.

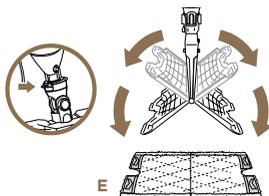

2. Slip the mop head's 4 corner tabs into the 4 corner pockets of the Dirt Grip™ Pad.

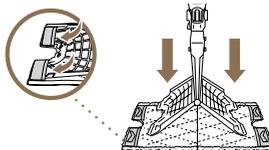

 3. Gently press the Intelli-Mop Head to the floor on one side of the pad, and that side will click into place.




4. Flip the other side of the Intelli-Mop Head over onto the floor to click into place.



REMOVING THE PAD

- Lift the mop straight up by the handle until the Intelli-Mop Head is hanging straight down. Press down the release buttons on the sides of the head post, and both sides of the mop head will drop open.

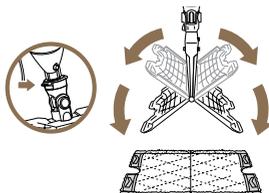


CAUTION: It is recommended that you allow the pads to cool off before removing them from the accessories to avoid possible scalding injury.

STEAM BLASTER™ TECHNOLOGY


When you need an extra burst of steam to clean tough, dried messes and stuck-on stains, use the Steam Blaster.

1. Flip back the Intelli-Mop™ Head so that it is behind the mop body.
2. Tilt the mop handle back. This will cause the Steam Blaster to emit a concentrated blast of steam onto the floor.
3. To stop the Steam Blaster spray, simply tilt the mop handle forward.
4. Flip the Intelli-Mop Head back into its original position and continue cleaning.

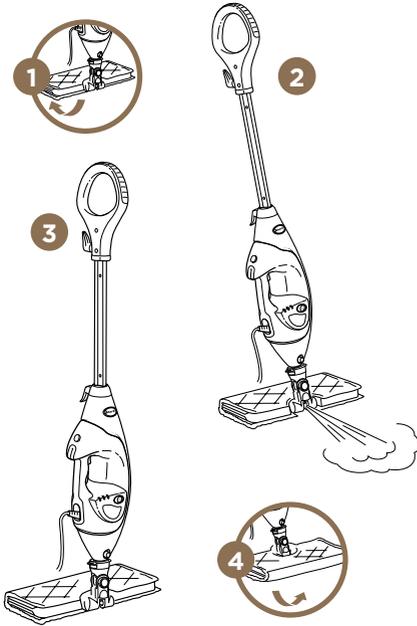

CLEANING

 1. Plug the power cord into an outlet. The **STEAM CONTROL** button will flash blue.
2. Press the **STEAM CONTROL** button to select your steam setting: once for **LO**, twice for **HI**, and three times to place the unit in **STANDBY MODE**.




INTELLIGENT STEAM CONTROL®

SETTING	IDEAL FOR THESE SEALED SURFACES	RECOMMENDED USAGE
Tools 	Laminate Hardwood Marble	Light cleaning & dusting
LO 	Hardwood Marble Tile Stone	Cleaning most surfaces & large areas
HI 	Hardwood Marble Tile Stone	Deep cleaning & cleaning hard-to-clean surfaces

ABOVE-FLOOR CLEANING

Remove the Handheld Steamer by pressing the release button and pulling it away from the cradle.

Snap the desired accessory into the main nozzle of the Handheld Steamer. Then squeeze the steam trigger to activate steam.

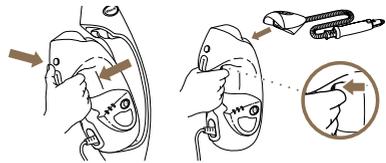

Once done with handheld steaming, press the **STEAM CONTROL** button until the light flashes blue to put the unit in **STANDBY MODE**. Let cool for 2 to 3 minutes before removing mop head, pads, or handheld accessories and storing.

(Note: **Tools** mode is only available when using the Handheld Steamer. When the Handheld Steamer is removed from the cradle, it will automatically go into **Tools** mode.)

ABOVE-FLOOR CLEANING ACCESSORIES

ACCESSORIES	USE	HOW TO ATTACH
G ACCESSORY HOSE 	For spot cleaning and direct steaming	Slide Accessory Hose onto the Handheld Steamer.
H GARMENT STEAMER 	Freshen clothing, fabrics, and upholstery	Slide the Garment or Upholstery Bonnet onto the Garment Steamer. Elastic will hold the bonnet in place. Snap the bristle over the Garment Steamer and bonnet then click the Garment Steamer onto the Handheld Steamer.
I SMALL ABOVE-FLOOR POCKET TOOL WITH PAD 	Ideal for small, uneven surfaces. The pointed tip is great for edges and corners.	Slide the pad onto the Small Above-Floor Pocket Tool so it fits snugly. Cinch the elastic band and slide the locking toggle to tighten. Connect the tool to the Accessory Hose by pushing firmly until it clicks into place, then click the Accessory Hose onto the Handheld Steamer.

For questions or to register your product, contact us at: 800-798-7398 or visit us online at sharkclean.com



@sharkcleaning