
ASSEMBLY


Spray Pocket™ **Mop Assembly**

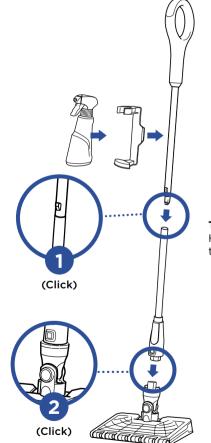

TO REMOVE the Genius™ Mop Head, press the release button on the front of the mop body.



Mop Head Release Button

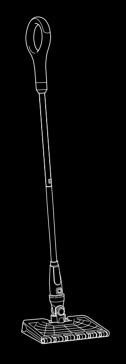

Shark.

For questions or to register your product, contact us at: 800-798-7398 or visit us online at sharkclean.com









Copyright © 2016 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC. SPRAY POCKET, GENIUS and DIRT GRIP are trademarks of SharkNinja Operating LLC.

S5004_160906

 


SPRAY POCKET™MOP

OWNER'S GUIDE

Use this Owner's Guide to learn about your new Shark Genius Spray Pocket Mop's great features.

 


 


 
- A Spray Pocket™ Mop Handle
- **B** Spray Pocket Mop Body
- © Reusable Spray Bottle
- Spray Bottle Clip
- Genius™ Mop Head
- Dirt Grip™ Pad (x2)











For additional parts and accessories, visit sharkaccessories.com

CLEANING

With the Genius[™] Mop Head, you can quickly and easily attach and release the Dirt Grip[™] Pads without touching them. No more wrestling with dirty, wet pads. The Dirt Grip Pads are double-sided, washable and reusable. For pad attachment and removal instructions, see the following page.

USING YOUR SPRAY POCKET™ MOP



The Spray Pocket Mop is a ready-to-grab hard-floor cleaner that is great for basic, everyday cleaning jobs.

Attach the Genius Mop Head and Dirt Grip Pad, and you're ready to quickly wipe away spills and dirt.

The spray bottle clips onto the Spray Pocket Mop handle and comes filled with Shark® Waterfall Fresh Hard Floor Cleanser. Spray the cleanser onto stains in either a mist or a targeted stream. (Twist the nozzle to choose either a mist or a targeted stream spray.) The cleanser will go to work, bringing you advanced cleaning performance. You can refill the spray bottle with the cleanser of your choice.

DIRT GRIP™ **PADS**

DOUBLE-SIDED, WASHABLE, REUSABLE

Our washable Dirt Grip Pads are made with fibers specially designed to absorb and trap dirt. This gives your floors an amazing clean, with minimal streaking and short dry times.

For best cleaning results, we recommend replacing your Dirt Grip Pads following 20 normal uses.



Machine wash the Dirt Grip Pads separately with warm water using liquid detergent.

NEVER USE BLEACH, POWDERED DETERGENT, OR FABRIC SOFTENERS as they may damage the Dirt Grip Pads.




Some parts may be available at your local retailer. Contact Customer Service for any other servicing.

GENIUS™ MOP HEAD TECHNOLOGY

TOUCH-FREE PAD ATTACHMENT



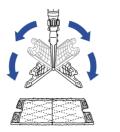

 Lift the mop straight up by the handle until the Genius Mop Head is hanging straight down. Center the Genius Mop Head above the pad. Press the pad release button, and both sides of the mop head will drop open.

 


2. Slip the mop head's 4 corner tabs into

 
the 4 corner pockets of the Dirt Grip™

Gently press the Genius Mop Head to the floor on one side of the pad, and that side will click into place. **4.** Flip the other side of the head over onto the floor to click into place.

REMOVING THE PAD







WARRANTY

ONE (1) YEAR LIMITED WARRANTY

SharkNinja Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions, and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid. For assistance with warranty service options or customer support, please call Customer Service at 1-800-798-7398 or visit sharkclean.com.

If the appliance is found to be defective in material or workmanship, SharkNinja Operating LLC will repair or replace it free of charge. Proof of purchase is required and a fee of \$19.95 will apply to cover the cost of return freight.*

The liability of SharkNinja Operating LLC is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling, or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or from repairs, service, or alterations to the product or any of its parts that have been performed by a repair person not authorized by SharkNinja Operating LLC.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of SharkNinja Operating LLC warranty, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is SharkNinja Operating LLC liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

*Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address, and phone number with a note giving purchase information, model number, and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".

REGISTRATION

PRODUCT REGISTRATION

Please visit registeryourshark.com or call 1-800-798-7398 to register your new Shark® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number, along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions and the accompanying warnings set forth in this owner's guide.

SAFETY WARNINGS

- **△** DO NOT allow the Spray Pocket[™] Mop to be used by children. Close attention is necessary when used near children, pets, or plants.
- ▲ Use only as described in this Owner's Guide.
- Use only manufacturer's recommended accessories.
- ▲ DO NOT use on leather, wax-polished furniture, synthetic fabrics, velvet, or other delicate materials.