




# QUICK START GUIDE

#### WHAT'S INSIDE

A Vacuum B Handle & Hose C Wand Hose Holder 5.5" Crevice Tool

Upholstery Tool

## ASSEMBLY

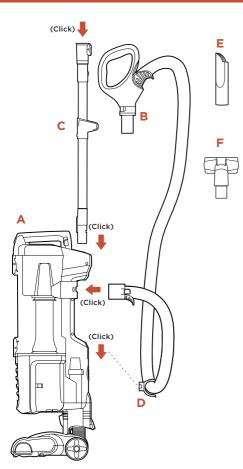


#### NOTE: For proper operation, ensure all parts are firmly CLICKED into place.

## **EMPTYING THE DUST CUP**

Empty the dust cup after each use.
 
#### MAINTENANCE




Remove dust cup to access foam and felt filters. Next, press down top of filter door. Tilt filter door and lift out. Press tab at top of HEPA filter and pull away from the base of the vacuum.

To reinstall, insert HEPA filter into unit and replace the filter door.

#### Wash filters every 3 months to keep the suction strong.

 Rinse filters with water only and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.



Use a coin to turn locks, then lift cover open. Clear the debris intake.


Shark's Zero-M<sup>™</sup> self-cleaning brushroll delivers non-stop hair removal. Remove any blockages or objects stuck on or around the brushroll.

If any hair is wrapped around brushroll, extending cleaning time will help it clear.

### **2 WAYS TO CLEAN**

## **FLOOR CLEANING** SUCTION CONTROL Adjust your suction depending on your floor type. MIN: to reduce suction and increase maneuverability on carpets. MAX: to increase suction on bare floors. OR HARD FLOOR CARPET Press switch to I for Press switch to II hard floor surfaces. for low and high pile To engage brushroll, step on floor carpet cleaning. nozzle and tilt handle back.

#### ABOVE-FLOOR CLEANING

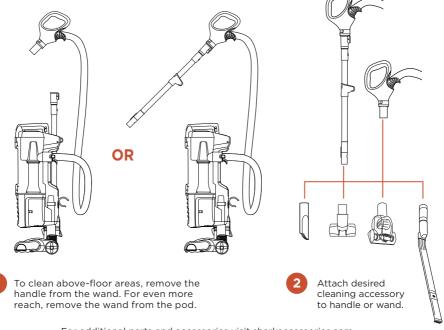

For additional parts and accessories visit sharkaccessories.com

For questions or to register your product, contact us at 1-800-798-7398 or visit us online at sharkclean.com

