

Shark®


STEAM MOP

QUICK START GUIDE

WHAT'S INSIDE

- A** Upper Extension Tube
- B** Lower Extension Tube
- C** Steam Mop Body
- D** Dirt Grip™ Pad
- E** Filling Flask


ASSEMBLY

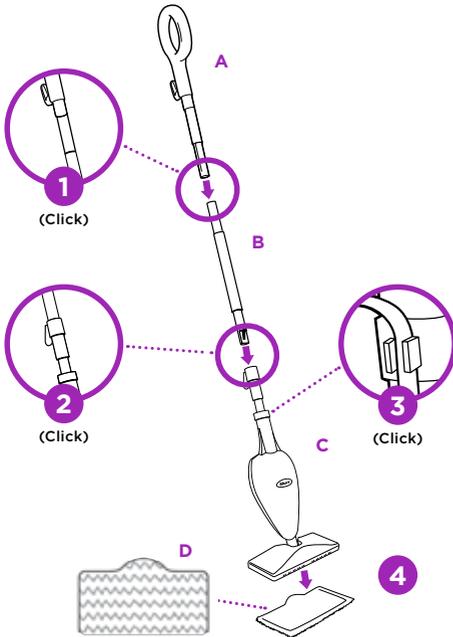


1. Slide the upper extension tube (the tube with the handle) into the lower extension tube (the short tube). Push the two extension tubes together until you hear it click into place.
2. Insert the assembled handle into the Steam Mop body until you hear it click into place.
3. Insert cord into cord clip on the back of Steam Mop body.
4. Place the DirtGrip pad on the floor with the quick fastener strips facing up, then press the mop head down onto the pad to attach.

FILLING THE WATER TANK

1. Remove the water tank cap by turning it counterclockwise to the unlocked position.
2. Use the filling flask to pour water into the tank. Do not overfill. Replace the cap on the water tank, and turn clockwise to lock.

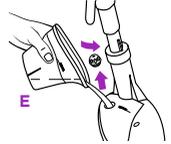

USING THE STEAM MOP

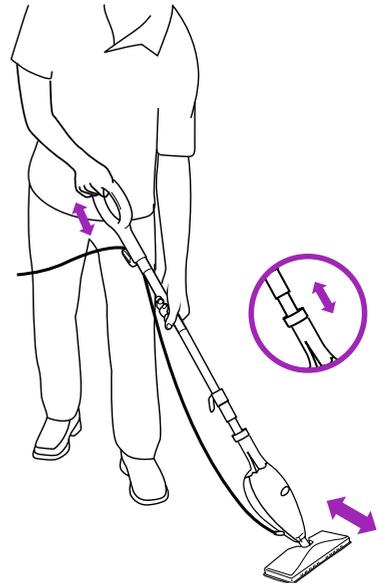

1. Unwrap the power cord by twisting the quick release cord holder on the handle. Plug cord into electrical outlet, and the LED light around the Shark logo will illuminate. (If your light doesn't turn on, reference the Troubleshooting section on reverse side.)
2. After 30 seconds, pump the handle a few times to prime the mop and activate steam.
3. Mop with a forward and backward motion to automatically customize steam output.

CLEANING THE DIRT GRIP™ PADS

Wash pads separately from other laundry. Wash in warm water, with no fabric softener, using liquid detergent only—no powder detergent. Dry on a clothesline or in a dryer on a low setting.

TROUBLESHOOTING

PROBLEM	POSSIBLE REASONS & SOLUTIONS
The Steam Mop will not turn on.	Your Steam Mop should be securely plugged into an electrical outlet. Check your fuse or circuit breaker. If your unit still doesn't turn on, give us a call: 1-800-798-7398.
Steam Mop will not make steam.	Is there water in the water tank? If not, add water to your Steam Mop, following filling instructions.
Steam Mop leaves water on the floor.	Do not leave the Steam Mop on the floor with a damp or wet pad attached. If you are using tap water, we recommend switching to distilled water. Ensure that water tank cap is locked securely.
Steam Mop left white spot on the floor.	Don't leave your Steam Mop on the floor with a damp or wet pad attached. Do you have hard water? We recommend using distilled water rather than tap water in the tank.
Floors are cloudy, streaky or spotty after steaming.	The pad may be dirty. Replace with a clean pad. If you washed pad with powdered detergent, then it may contain residual detergent. Wash pad again with liquid detergent. In kitchen areas with grease buildup, first prep the floor with a de-greasing agent such as an all-purpose cleaner or dish soap, then wipe with paper towels. You might have left the mop in the same spot for too long. Do you have hard water? We recommend using distilled water rather than tap water in the tank. Streaks, clouds, and spots may be caused by cleansers previously used on the floor surface. Clean with Steam Mop a few more times to remove leftover cleansers.
Steam Mop is hard to push.	Make sure the Dirt Grip pad is attached properly.

For questions or to register your product, contact us at: 800-798-7398 or visit us online at sharkclean.com



@sharkcleaning