


CORDLESS 3-IN-1



UPRIGHT

The brushroll is activated when the hand vacuum is connected and powered on, and the handle is tilted back.

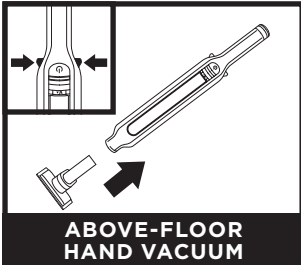

ABOVE-FLOOR
HAND VACUUM


To detach the hand vacuum, press the release buttons on both sides of the handle and lift it off the wand. Attach an accessory by sliding it into the nozzle. To remove the accessory, press the release buttons on the handle. To reattach the hand vacuum, slide the nozzle over the wand on until it clicks into place.



ABOVE-FLOOR
WAND


To detach the floor nozzle, step on the nozzle while pressing the release button at the bottom of the wand. Lift the wand to remove it. Reattach by sliding the wand over the nozzle neck until it clicks into place.

EMPTYING THE DUST CUP

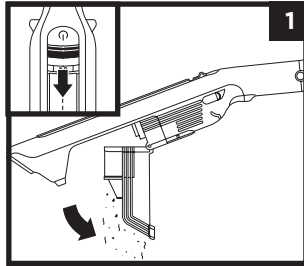

1

With the power off, slide the release button forward, and the dust cup will swing open. Tap the dust screen lightly to knock off dust and debris.

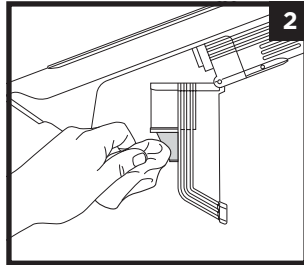

2

Wipe dust screen lightly with a dry cloth to remove dust and dirt.

Please make sure to read the enclosed Shark® Owner's Guide prior to using your vacuum.

Shark WANDVAC™ SYSTEM

CORDLESS 3-in-1

QUICK START GUIDE

For questions, visit us online
at sharkclean.com/support

Register your vacuum at
registeryourshark.com



Shark.



@sharkcleaning


© 2020 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC. WANDVAC is a trademark of SharkNinja Operating LLC.

WS630_QSG_MP_Mv3

WS630


WHAT'S INSIDE:

- A** Hand Vacuum
- B** Wand
- C** PowerFins Floor Nozzle
- D** WANDVAC™ System Docking Station
- E** Battery Pack
- F** Hand Vacuum Storage Clip
- G** Duster Crevice Tool

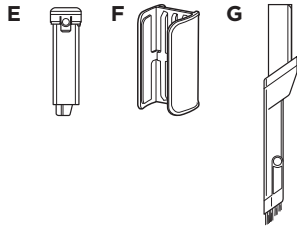

1. Slide the wand onto the neck of the floor nozzle until it clicks into place.
2. Slide the hand vacuum nozzle over the wand until it clicks.
3. Make sure the dock plate is facing upright. Slide the charging post into the slot on the back of the dock until it clicks into place.
4. Place the dock on the floor near a wall outlet. Plug the wall charger into the outlet, then connect the cord to the port on the back of the charging post.
5. Store cleaning accessories on the mount on the dock plate.



For proper operation, ensure all components are completely connected and clicked into place.

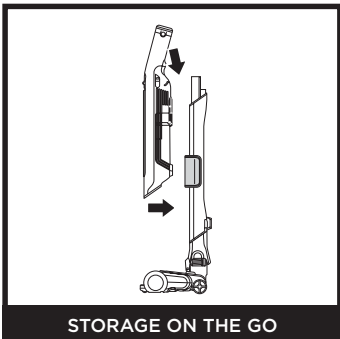

STORAGE ON THE GO

To store the hand vacuum on the wand, slide it onto the storage clip on the wand, with the filter removal latch on the back of the hand vacuum sitting inside the clip.

ASSEMBLY

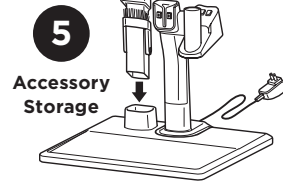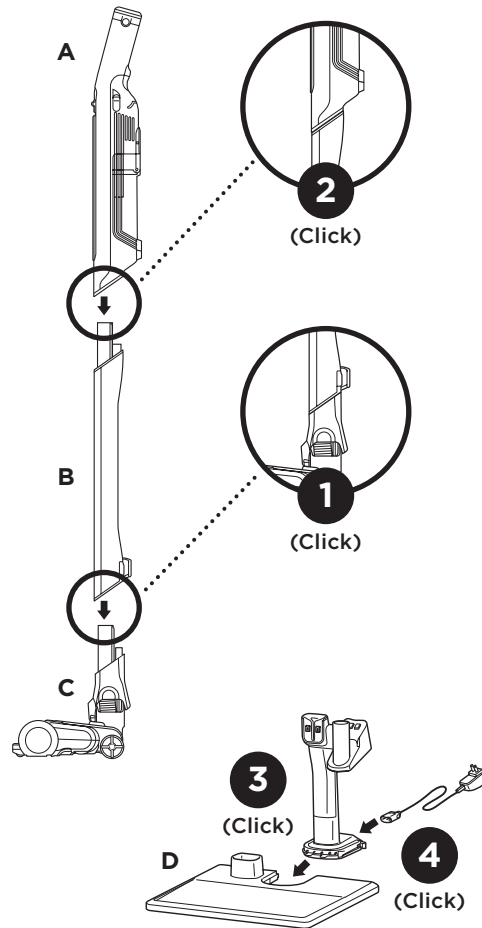


For complete maintenance instructions, see the enclosed Owner's Guide.


For additional parts and accessories, visit sharkaccessories.com.

For additional batteries and charging accessories, visit sharkclean.com/batteries.

POWER SETTINGS

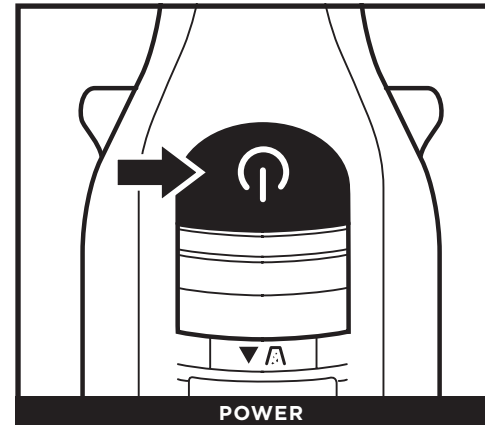


Press the On/Off button on the handle to turn on power. To turn off power, press the button again.

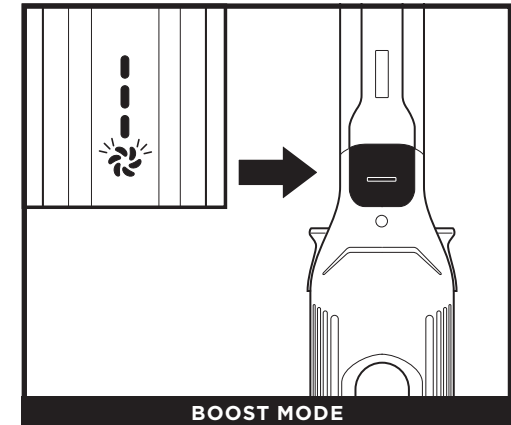


For an added boost of power, push and hold the Boost button on the handle. The Boost icon will blink white while in this mode. Release the button to return to standard power.

LI-ION BATTERY


Charging

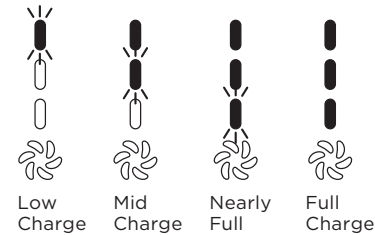


In Use

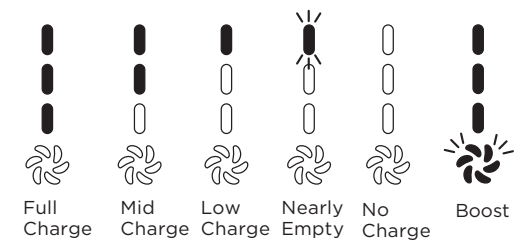


CHARGING OPTIONS

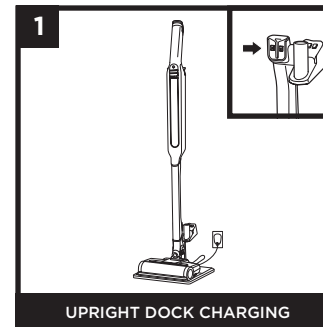

UPRIGHT DOCK CHARGING

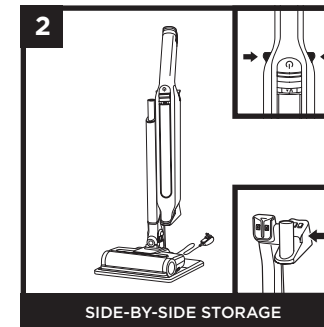

SIDE-BY-SIDE STORAGE

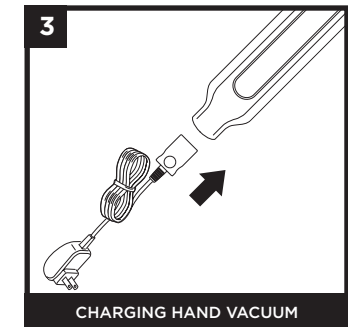

CHARGING HAND VACUUM

Make sure the contacts on the wand or hand vacuum are aligned with the contacts on the charging post. When docked properly, the charging lights on the hand vacuum will blink, indicating that charging has begun. When charging is complete, all three indicator lights will illuminate steadily, and then shut off after 10 minutes.