



## WHAT'S INSIDE:

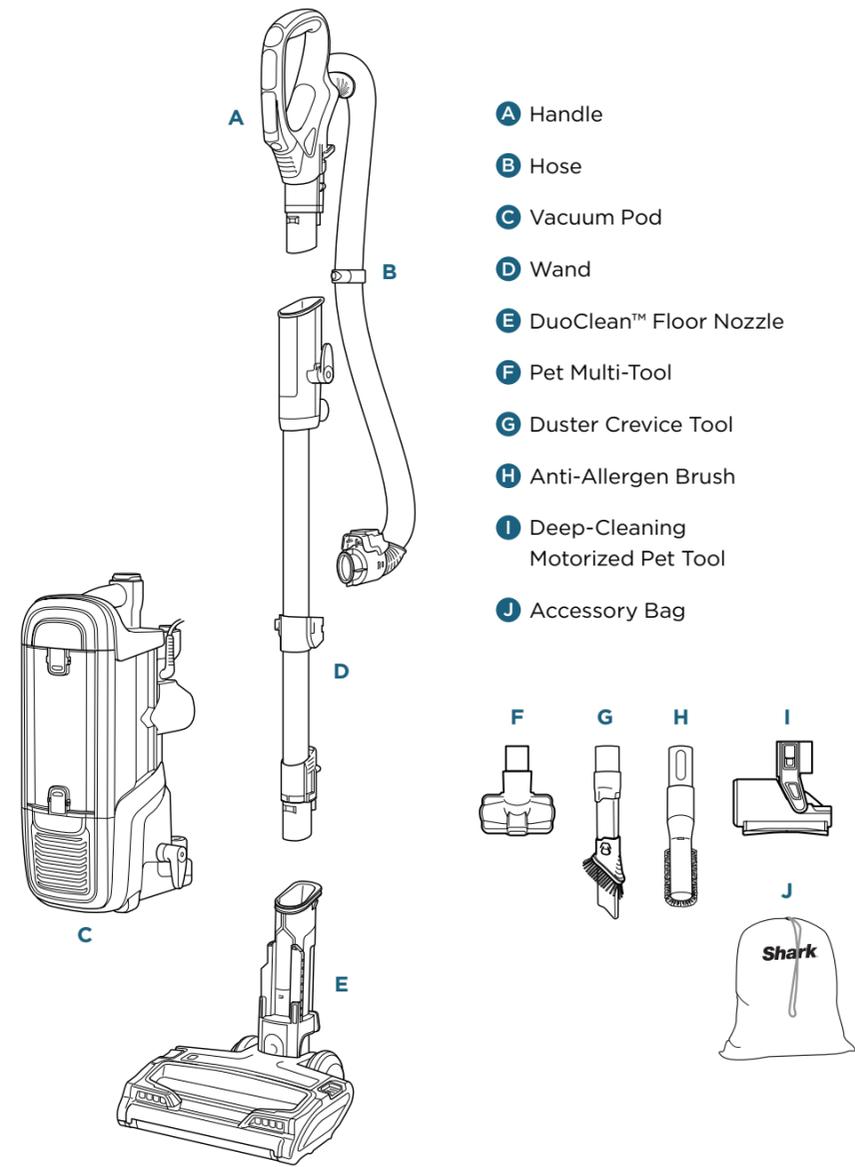

For additional parts and accessories, visit [sharkaccessories.com](http://sharkaccessories.com)

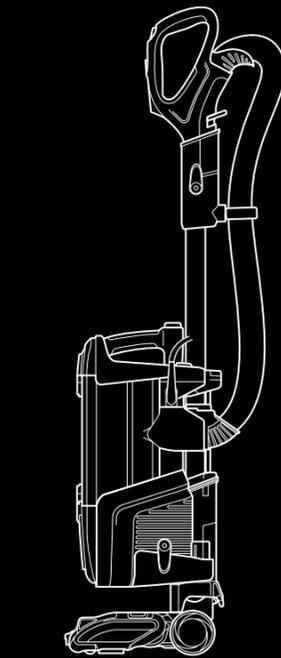

# Shark

For questions or to register your product, contact us at 1-800-798-7398 or visit us online at [sharkclean.com](http://sharkclean.com)



@sharkcleaning

©2017 SharkNinja Operating LLC. LIFT-AWAY, POWERED LIFT-AWAY, and SHARK are registered trademarks of SharkNinja Operating LLC. APEX and DUOCLEAN are trademarks of SharkNinja Operating LLC.

NV852\_170512

Please be sure to read the enclosed Shark® Owner's Guide prior to using your vacuum.

duo clean™

# Shark APEX™

POWERED LIFT-AWAY®




## QUICK START GUIDE

Use this Quick Start Guide to learn about your new vacuum's great features.

NV852

## ASSEMBLY

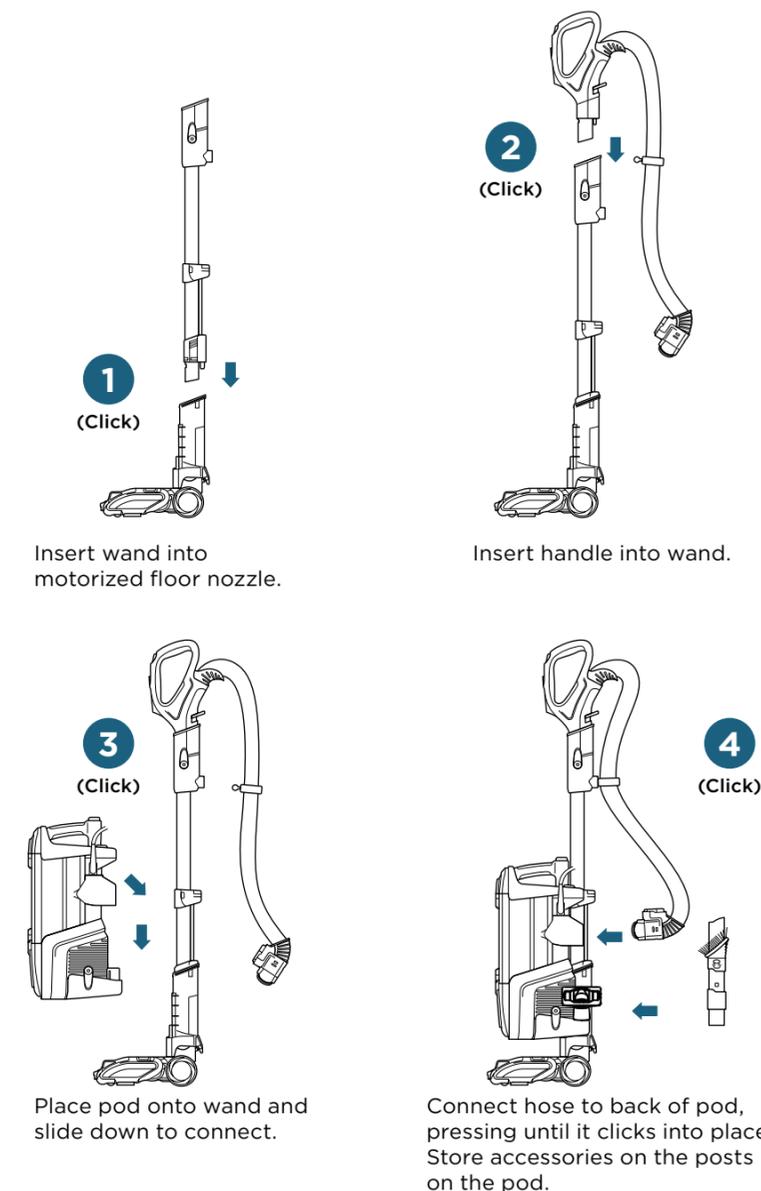

## WHAT DOES IT TAKE TO BE SHARK'S BEST?

Uncompromising power.  
 Unexpected performance.  
 Unlimited potential.

In a word,

# APEX™

# HAVING TROUBLE?

## ISSUE

Vacuum is not picking up debris. No suction or light suction.

### Solution

Empty dust cup, clean filters, check all openings for blockages.

## ISSUE

Vacuum lifts area rugs.

### Solution

Turn off the unit to disengage the brushroll and restart with the Power button.

## ISSUE

Brushroll and/or Soft Roller does not spin. The Brushroll Indicator Light on the floor nozzle turns red.

### Solution

Turn off the unit and move away from any obstruction, then turn on power and tilt handle back. If the light remains red, turn off and unplug the vacuum. Disconnect the nozzle and remove any blockages. Make sure the brushroll lid is firmly locked into position on both sides. Plug in the vacuum, turn on power, and tilt handle back. If Brushroll Indicator Light isn't green and headlights are flashing, check again that both sides of the lid are locked into place. If the light is still red, please contact customer service at 1-800-798-7398.

## 3 WAYS TO CLEAN

1


### UPRIGHT MODE

Use for carpet and hard-floor cleaning

Power Button



Floor Type

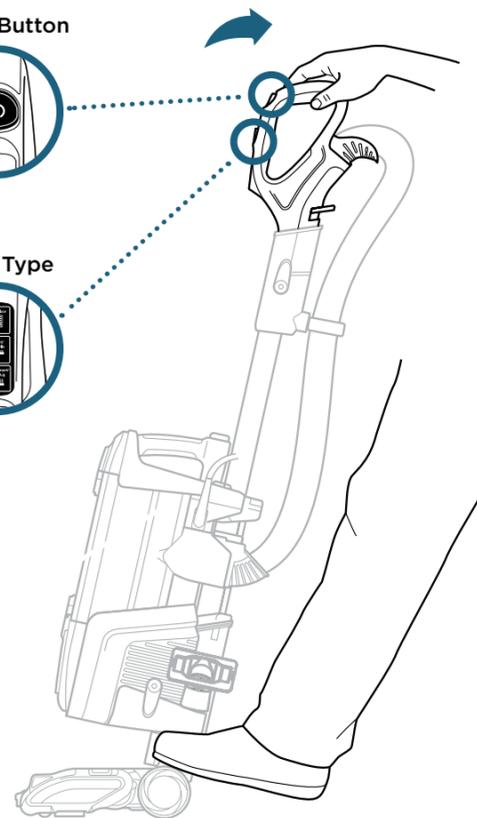

Place foot on floor nozzle and tilt handle back. Choose appropriate floor setting and press power button.

2

### LIFT-AWAY® MODE


Use for portable cleaning on stairs or above-floor areas



Lift-Away Release




Wand Release

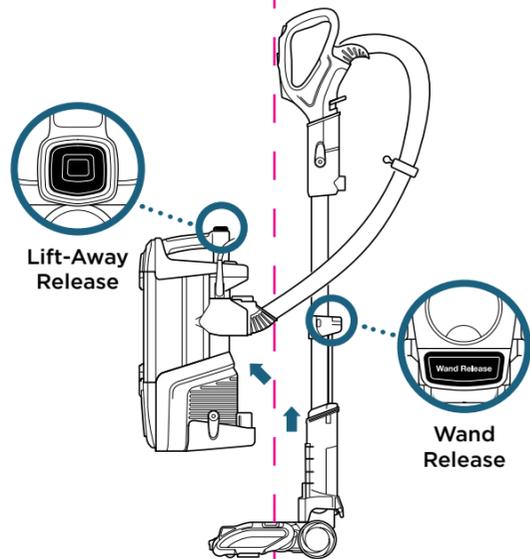

Press Lift-Away Release button to lift pod off floor nozzle. You are now ready to clean those hard-to-reach places.

Attach any of the specialized cleaning accessories to the handle or wand.

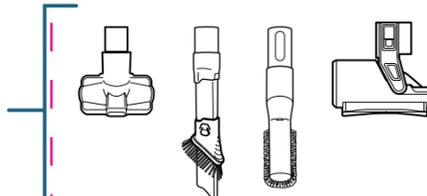


3

### CANISTER MODE

Convert your upright to a convenient canister (caddy sold separately)




Handle Release

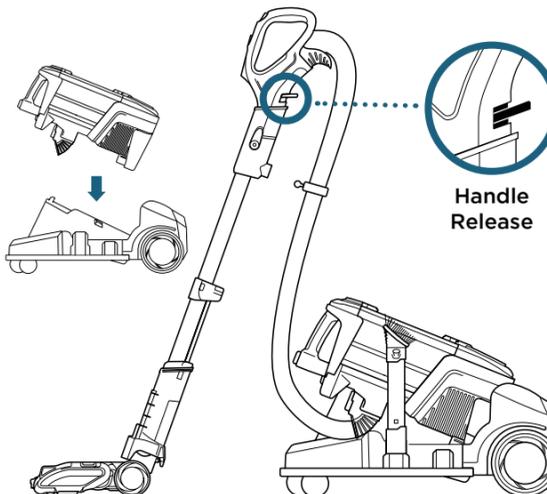

From Lift-Away mode, place pod onto caddy.

When you are done cleaning with your caddy, press the Lift-Away Release button to remove the pod.

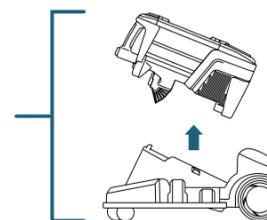


## DUOCLEAN™ TECHNOLOGY

### ON FLOORS

Direct engagement with the Soft Roller removes large particles, small particles, and stuck-on dust.

#### Hard Floor

Gentle on bare floors and delicate area rugs.

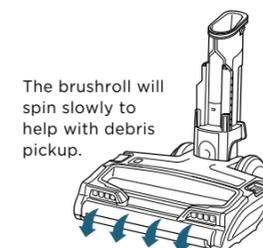

The brushroll will spin slowly to help with debris pickup.



### ON CARPETS\*

The Soft Roller pulls in large particles, while the deep-cleaning bristle brush removes embedded fine dirt.

#### Carpet/Low Pile


Optimized brushroll speed and suction for carpets.

#### Thick Carpet/Area Rug

Optimized brushroll speed and suction for thick carpets and delicate area rugs.




The brushroll will spin faster to help pick up debris below the surface.

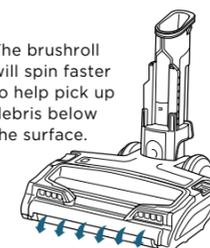

\*For deep cleaning per ASTM F 608 (embedded dirt in carpet) please use in Carpet/Low Pile mode.

## MAINTENANCE

### Empty dust cup after each use

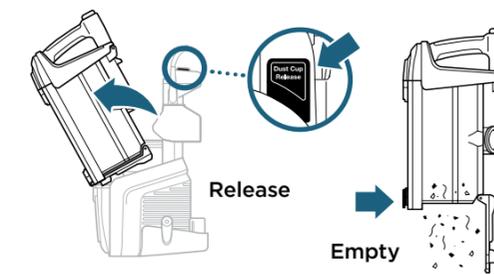


#### TIP:

Wash filters to keep the suction strong. Rinse filters and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes. See enclosed Owner's Guide for complete details on removing and cleaning filters.


### Brushroll garage for easy access to your brushrolls.

Open the brushroll lid by sliding both release buttons away from you, toward the back of the nozzle, then lifting off the lid. To close the brushroll lid, insert the 3 tabs on top of lid into the 3 slots in the nozzle, then push down on both sides of lid until it clicks securely into place. If headlights flash when the power is turned on, the brushroll lid is not completely secured, and the brushrolls will not engage and the vacuum will not operate.

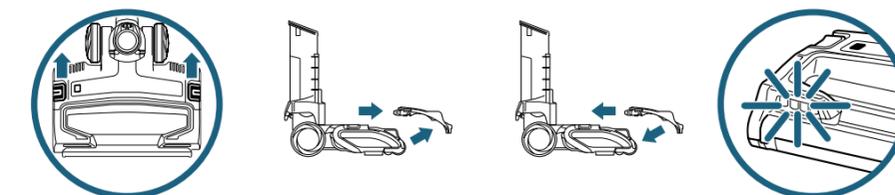

### Brushroll Maintenance.

Remove any string, hair, or debris that may be wrapped around the brushroll by running scissors along the guide on the brushroll.

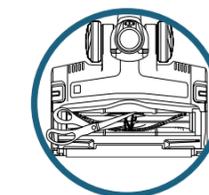

### Soft Roller Maintenance.

Lift out Soft Roller by the tab on the right side. Clean off any string, carpet fibers, or hair that may be wrapped around the Soft Roller. Remove debris from the roller housing. Reinsert the Soft Roller by sliding it into the front of the nozzle until it clicks into place.

