# Shark, powered LIFT-AWAY duo clean

## QUICK START GUIDE

WHAT'S INSIDE

Motorized Floor Nozzle

A Handle



NOTE: For proper operation, ensure all parts are firmly CLICKED into place.

#### EMPTYING THE DUST CUP



Filter Maintenance To keep suction strong, rinse filters regularly, using water only. Allow filters to air-dry completely before reinstalling. Tap loose dirt from foam filters as needed between washes. See enclosed Owner's Guide for complete details on removing and cleaning filters.

### EASY ACCESS TO YOUR BRUSHROLLS

Open the brushroll garage by sliding back the release buttons. To close, insert the tabs on the lid into the slots on the nozzle, then press down both sides. If the lid isn't completely closed, the headlights will flash.

#### **BRUSHROLL MAINTENANCE**

Remove any string, hair, or debris that may be wrapped around the brushroll by running scissors along the guide on the brushroll.



#### SOFT ROLLER MAINTENANCE

Lift out the Soft Roller by pulling the tab on the right side. Clear away any debris, then slide the Soft Roller back into place.



#### UPRIGHT MODE

Place foot on floor nozzle and tilt handle back. Choose appropriate floor setting and press power button.





Hard Floor: Gentle on bare floors and delicate rugs.

**Carpet/Low Pile:** Optimized brushroll speed and suction for carpets.

**Thick Carpet/Area Rug:** Optimized brushroll speed and suction for thick carpets.

#### **POWERED LIFT-AWAY® MODE**

Press Lift-Away Release button to lift pod off floor nozzle. You are now ready to clean those hard-to-reach places.



#### ABOVE-FLOOR CLEANING IN LIFT-AWAY MODE



#### For additional parts and accessories, visit sharkaccessories.com

For questions or to register your product, visit us online at sharkclean.com

