
MAINTENANCE

Empty dust cup after each use

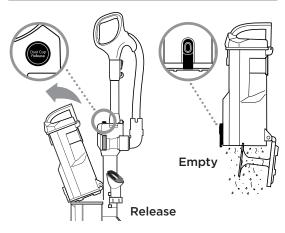

Filter Maintenance

Wash filters regularly to keep the suction strong.

Rinse filters with water only, and allow them to air-drv before reinstalling. Tap loose dirt from filters as needed between washes.

See enclosed Owner's Guide for complete details on

Self-Cleaning Brushroll

 
NOTE: If any hair is wrapped around the brushroll, extending cleaning time will allow the self-cleaning brushroll to remove it for you.

Cleaning the Brushroll

1. To open the brushroll garage, slide both release buttons on the floor nozzle away from you, towards the back of the nozzle, then lift off the lid.

2. Clear away any objects or debris.

3. To close the brushroll garage, insert the 3 tabs on top of the lid into the 3 slots in the nozzle, then push down on both sides of the lid until it clicks securely into place. If the Brushroll Indicator Light isn't green and headlights are flashing, check again that both sides of the lid are locked in place.




QU202Q_QSG_MP_Mv2





@sharkcleaning

 To register your product, or for answers to frequently asked questions, visit registeryourshark.com.



removing and cleaning filters.

Please be sure to read the enclosed Shark[®] Owner's Guide prior to using your unit.

Shark. **UPRIGHT**

with Shark[®] Self-Cleaning Brushroll **QU202Q** Series

QUICK START GUIDE

Use this Quick Start Guide to learn about vour new vacuum's great features.



Cleaning the Soft Roller

Brushroll Maintenance

impeding the brushroll.

Lift out the Soft Roller by pulling the tab on the right side. Clear away any debris, then slide the Soft Roller back into place.

(f)

Carefully remove any debris that may be

WHAT'S INSIDE:

ASSEMBLY

2 WAYS TO CLEAN:

