

SETUP

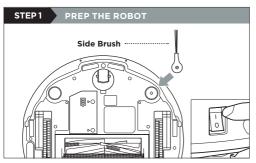


• Remove protective film from robot and base.


- Snap the single side brush onto the post on the bottom of the robot.
- Turn on the power by pressing the button on the side of the robot to the (I) ON position.

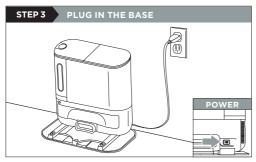

- Plug the base power cord into an electrical outlet.
- Turn the **power switch** on the back of the base to the (I) ON position.
- The green **power indicator light** \bigcirc on the base will illuminate when the base has power.

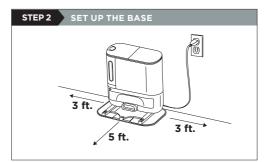

Find a **permanent** location for the base. Place it with its back against a wall, in an area with a strong Wi-Fi signal. **Remove any objects** that are closer than 3 ft. from either side of the base, or closer than 5 ft. from the front. For best results, set up base on **bare floor**.

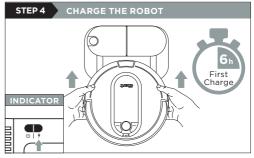

- To charge, place robot with its **BACK** side against base.
- Turn power switches on BOTH robot and base to (I) **ON** position.
- When charging begins, robot will beep and BLUE charging indicator light f on base will PULSE.
 When robot is fully charged, light f will turn SOLID blue.

NOTE: Every time the robot returns to the base, it will make a loud noise as it empties debris. This is normal and no cause for concern.

OPTIMIZING YOUR HOME FOR CLEANING



Clear cords and remove small objects like toys, clothing, or drapes from floors. Open interior doors in rooms you want your robot to clean. For best results, run your robot in well-lit conditions.

STEP 6 DOWNLOAD THE SHARKCLEAN® APP




Scan QR code with your phone's camera to quickly find and download the app

Search "SharkClean" in the app store. Some of the exclusive features in the app:


- Cleaning Reports Scheduled Cleaning
- Extended Clean Cleaning Modes

WHAT TO EXPECT

As your robot learns your home, you may need to make some small adjustments to optimize performance.

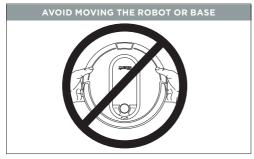

While your robot is cleaning, **DO NOT** pick it up and move it, or move the charging base-this will impact the robot's ability to clean your home.

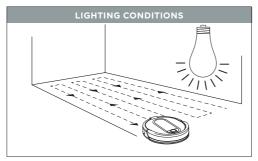

For best results, run your robot in well-lit conditions. If you run your robot at night, keep the lights on in the areas to be cleaned.

CAN'T CONNECT TO WI-FI? Restart your phone


• Turn off phone, wait a few minutes, then turn it back on and connect to Wi-Fi.

Reboot your robot


- BASE is in the ON position.
 Press the power button on the side of the ROBOT to the OFF position. Wait 10 seconds, then press

Reboot your router

Unplug the router power cable for 30 seconds, then plug it back in. Allow several minutes for your router to reboot completely.

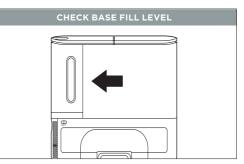

During the first few weeks, your robot will empty more debris than usual. Check the fill level regularly. The dust bin is designed to hold up to 30 days' worth of debris, but home environments vary, and the bin may fill up auicker in some homes.

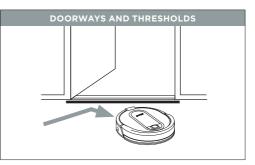

Your robot can easily climb over most thresholds, but if one is higher than an inch, block it off with a BotBoundary® strip. BotBoundary strips are not included in the box. To purchase, please visit sharkaccessories com

Questions? One Easy Step If You're Stuck:

Having trouble connecting to your robot?

For how-to videos, FAQs, troubleshooting, and tips & tricks visit: sharkclean.com/support

Smart Home Setup

To set up voice control using Google Home or Amazon Alexa, visit **sharkclean.com/app** for instructions

© 2022 SharkNinja Operating LLC. BOTBOUNDARY, CONSTANT STATE OF CLEAN, SHARK, SHARKCLEAN, SHARK IQ ROBOT SELF-EMPTY, and SHARK IQ ROBOT are registered trademarks of SharkNinja Operating LLC. APPLE, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. APP STORE is a service mark of Apple Inc., registered in the U.S. and other countries. GOOGLE, GOOGLE ASSISTANT, GOOGLE PLAY, the Google Play logo, and Android are trademarks of GOOGLE LLC.

RV900S_QSG_NBRSH_E_MP_Mv1

@sharkcleaning