QUICK START GUIDE

SETTINGS

Mode Dial: To switch between modes, turn the dial to the desired mode icon.

- **Detect Mode:** Select Detect mode to activate DuoClean Detect™. In this mode, the vacuum will detect floor type, dirt, edges, and cleaning direction, and will automatically adjust suction to maximize cleaning performance.
- **Manual Surface Modes:** Select one of the manual surface modes (Hard Floor, Carpet/Low Pile, or Thick Carpet/Area Rug) to clean specific surfaces without DuoClean Detect.

DUOCLEAN DETECT

FLOOR DETECT™
Identifies **surface type** and adjusts brushroll speed and suction for optimized cleaning.

DIRT DETECT
Identifies dirty areas and automatically **boosts suction power to pull in hidden dirt.**
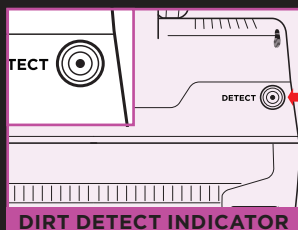
EDGE DETECT
Focuses and **maximizes suction along corners and edges** to target stubborn dirt.

DIRECTION DETECT
Senses **cleaning direction** & directs suction **forward** or **reverse.**
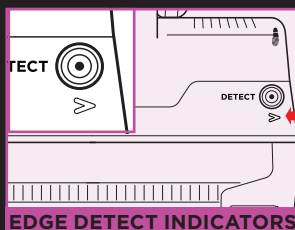
DETECT INDICATORS

DIRT DETECT INDICATOR

DIRT DETECT INDICATOR

CLEANING (WHITE)

CLEANING BOOST (PURPLE)

EDGE DETECT INDICATORS

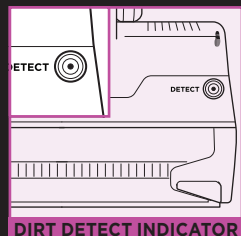EDGE DETECT INDICATORS

< LEFT EDGE

> RIGHT EDGE

SENSOR CLEANING

Clean the sensors **when the DIRT DETECT icon turns red.** If the sensors are partially obstructed, Detect mode will not function as expected. If the icon is still red after cleaning, refer to **Detect Sensor Maintenance** in the Owner's Guide.
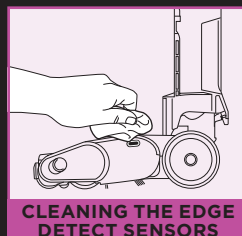
CLEANING THE DETECT SENSORS

DIRT DETECT INDICATOR

CLEANING THE DIRT DETECT SENSOR

CLEANING THE FLOOR DETECT SENSOR

CLEANING THE EDGE DETECT SENSORS

SENSORS REQUIRE CLEANING (RED)

TO CLEAN THE SENSORS:
1. Turn off power and remove the floor nozzle.
2. Locate the Dirt Detect sensor in the nozzle (Fig. 1), the Floor Detect sensor on the bottom of the nozzle (Fig. 2), and the Edge Detect sensors on both sides of the nozzle (Fig. 3).

3. Gently wipe the sensors with a microfiber cloth and remove all hair and debris.
4. Reattach the floor nozzle to the rest of the unit and turn on power. Verify the unit is functioning normally.